



Installation/Operation Instructions

Fiber Optic Video & Data **Transmission System**

DT/DR-1V(W)1D Series

(1-Channel Video, 1 Channel RS-232 Data
Transmitter/Receiver)



Meridian Technologies, Inc.
700 Elmont Road, Elmont NY 11003
Telephone : 516. 285. 1000 Fax: 516. 285. 6300
E-mail : sales@meridian-tech.com
Web: www.meridian-tech.com

Document Version 1.0

08/25/2009

Table of Contents

1.0	Product Description.....	3
2.0	Installation	3
3.0	Operation	3
3.1	Video & Audio Status indicators	4
4.0	Audio Signal Connector Pinouts	5
5.0	Specifications.....	5
6.0	Front Panel Pinout Assignment Diagram	6
7.0	Troubleshooting	9
	Appendix 1 – Applicable Product Part Number Variations	10

1.0 Product Description

Meridian's product series DT/DR-1V(W)1D-x are fiber optic modems that transmit or receive one 8-bit (or 10-bit) Video channel and one RS-232 data channels over optical fiber using digital transmission technologies (the exact type and number of channels is determined by the part number guide in Appendix 1). This product series uses Meridian's standard 2-slot wide chassis mount card assembly and plugs into the following Meridian chassis: SR-1000, SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis.

The digital modules consist of various plug-in personality function cards or SIMs. The top card is the optical card that contains the fiber optic interface. The optical output (Tx) connector is located on the left side of the module while the optical input (Rx) connector is located on the right side of the module. The next SIM card contains one video channel. The last SIM card contains one RS-232 data channel.

2.0 Installation

Series DT/DR-1V(W)1D-x products are two-slot wide cards and, as such, occupy two slots in Meridian's standard chassis (SR-1000, SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis). To install in the chassis, orient the card with the Meridian logo at the top of the module and slide onto the top and bottom card guides in the chassis. Press securely on the top and bottom of the module to ensure that it is fully seated in the chassis so that the electrical connector mates with the chassis-mounted motherboard. Once installed, manually tighten the two thumbscrews located at the top and bottom of the card. Do not use tools to secure these and do not over tighten.

Note: A fully populated subrack should have forced-air cooling to avoid excessive heat generation inside the chassis. A fan assembly tray (P/N FA-2000) with three (3) fans is available and should be installed under the 19" SR-2000/1 whenever possible.

3.0 Operation

Video – Each BNC video connector accepts a standard NTSC/PAL video input signal (DT module) and transmits these signals to the receive unit (DR module). The respective video output signal is located on the same channel (location) as the input video signal. Connect the input video signal to the appropriate BNC video input connector on the transmitter module (DT-1V1D) and the output video connector on the associated port on the receiver module (DR-1V1D).

Data – Connect the RS-232 data for each of the data channels to the appropriate data Tx/Rx pins on the connector as shown in section 4.0

3.1 Video & Data Status indicators

The figures at the end of this document show the connector and LED indicator locations for the various video and audio status indicators on the transmitter and receiver modules. There are a number of diagnostic indicators on the front panel of each module. In addition, each of the video input/output channels has indicators associated with them to provide quick visual indications of the channel activity. These indicators for each of the video & data channels are listed below:

Transmitter (DT-1V1D) Indicators		
Indicator	Location	Function
Tx carrier	Under optical output connector	Optical output (Green – OK, Red – error)
Power	Left side of module	Green – ON
Video #1 (each input)	Under video input connectors	Green – Sync received
Video #2 (each input)	Under video input connectors	Video signal – Green OK, Red – video overload

Receiver (DR-1V1D) Indicators		
Indicator	Location	Function
Rx Optical signal	Under optical output connector	Optical input (Green – OK, Red – error)
Rx Carrier	Under optical output connector	Optical Carrier input (Green – OK, Red – error)
Power	Left side of module	Green – ON
Video #1 (each output)	Under video output connectors	Green – Sync received
Video #2 (each output)	Under video output connectors	Video signal – Green OK, Red – video overload

Each data input/output channel has two LED status indicators located under the associated data I/O connector. One LED is associated with each data input and output channel to show activity on both the input (transmit) and output (receive) pins. The table below shows the relationship between the connectors (I/O channels) and LEDs.

Data Input/Output Status Indicators	
LED	DT/DR-1W(V)1D-x
1	Input 1 – Green – data present
2	Output1 – Green - data present
3	N/A
4	N/A
5	N/A
6	N/A
7	N/A
8	N/A

4.0 Data Signal Connector Pinouts

The DT/DR-1V1D data channel connector pinouts are shown in the table below:

Transmitter (DT) Module		Receiver (DR) Module	
Pinout	DT-1V1D (Port 4)	Pinout	DR-1V1D (Port 4)
1	NA	1	NA
2	NA	2	CH.1 OUTPUT (TD)
3	CH.1 INPUT (RD)	3	NA
4	NA	4	NA
5	NA	5	NA
6	NA	6	NA
7	NA	7	NA
8	NA	8	NA
9	NA	9	NA

The attached figures in section 6 show the module front panel and associated connector location & pinouts.

5.0 Specifications

The tables below identify the specifications for the various signals that these modems transmit/receive.

The DT & DR -1V1D series products transmit and receive the following signals:

Signal Type	Qty	Transmit	Receive
NTSC/PAL video	1	Yes	Yes
Data RS-232	1	Yes	Yes

The tables below identify the specifications for the various signals that these modems transmit/receive.

Video	DT/DR-1W1D	DT/DR-1V1D
	10-bit Video	8-bit Video
Format	NTSC, PAL, SECAM	NTSC, PAL, SECAM
Voltage/Impedance	1Vp-p, 75 Ohm, 1.5Vp-p	1Vp-p, 75 Ohm, 1.5Vp-p (max)
Differential Gain	<0.6%	<0.6%
Differential Phase	<0.3°	<0.3°
SNR	>67dB (weighted)	>60dB (weighted)
Return Loss	>30dB	>30dB
Field Tilt	<0.5%	<0.5%

Data	
Formats	RS-232
Date Rate (RS-232)	DC to 125Kb/s
Bit Error Rate (BER)	Better than 10^{-9}

Connectors	
Video	BNC connector (one per channel)
Data	DB9 Female
Optical	Singlemode – ST or FC Multimode - ST

Fiber Type/Size (um)	Optical Output (dBm)	Rx Sensitivity (dBm)	Optical Budget (dB)	Wavelength (nm)	Optical connector	Optical Dynamic Range (dB)
Multimode (FP Laser) 62.5/125	-3	-22	19	850	ST	22
Multimode (FP Laser) 62.5/125	-3	22	19	1300	ST	22
Singlemode 9/125	-3	22	19	1310	ST, FC	22
Singlemode 9/125	+2	-22	24	1310DFB	ST, FC	22
Singlemode 9/125	+3	-22	25	1550DFB	ST, FC	22

6.0 Front Panel Pinout Assignment Diagram

Figures 6.1 and 6.2 below show the front panel layout, connector location and pinout assignment for both the DT & DR modules.

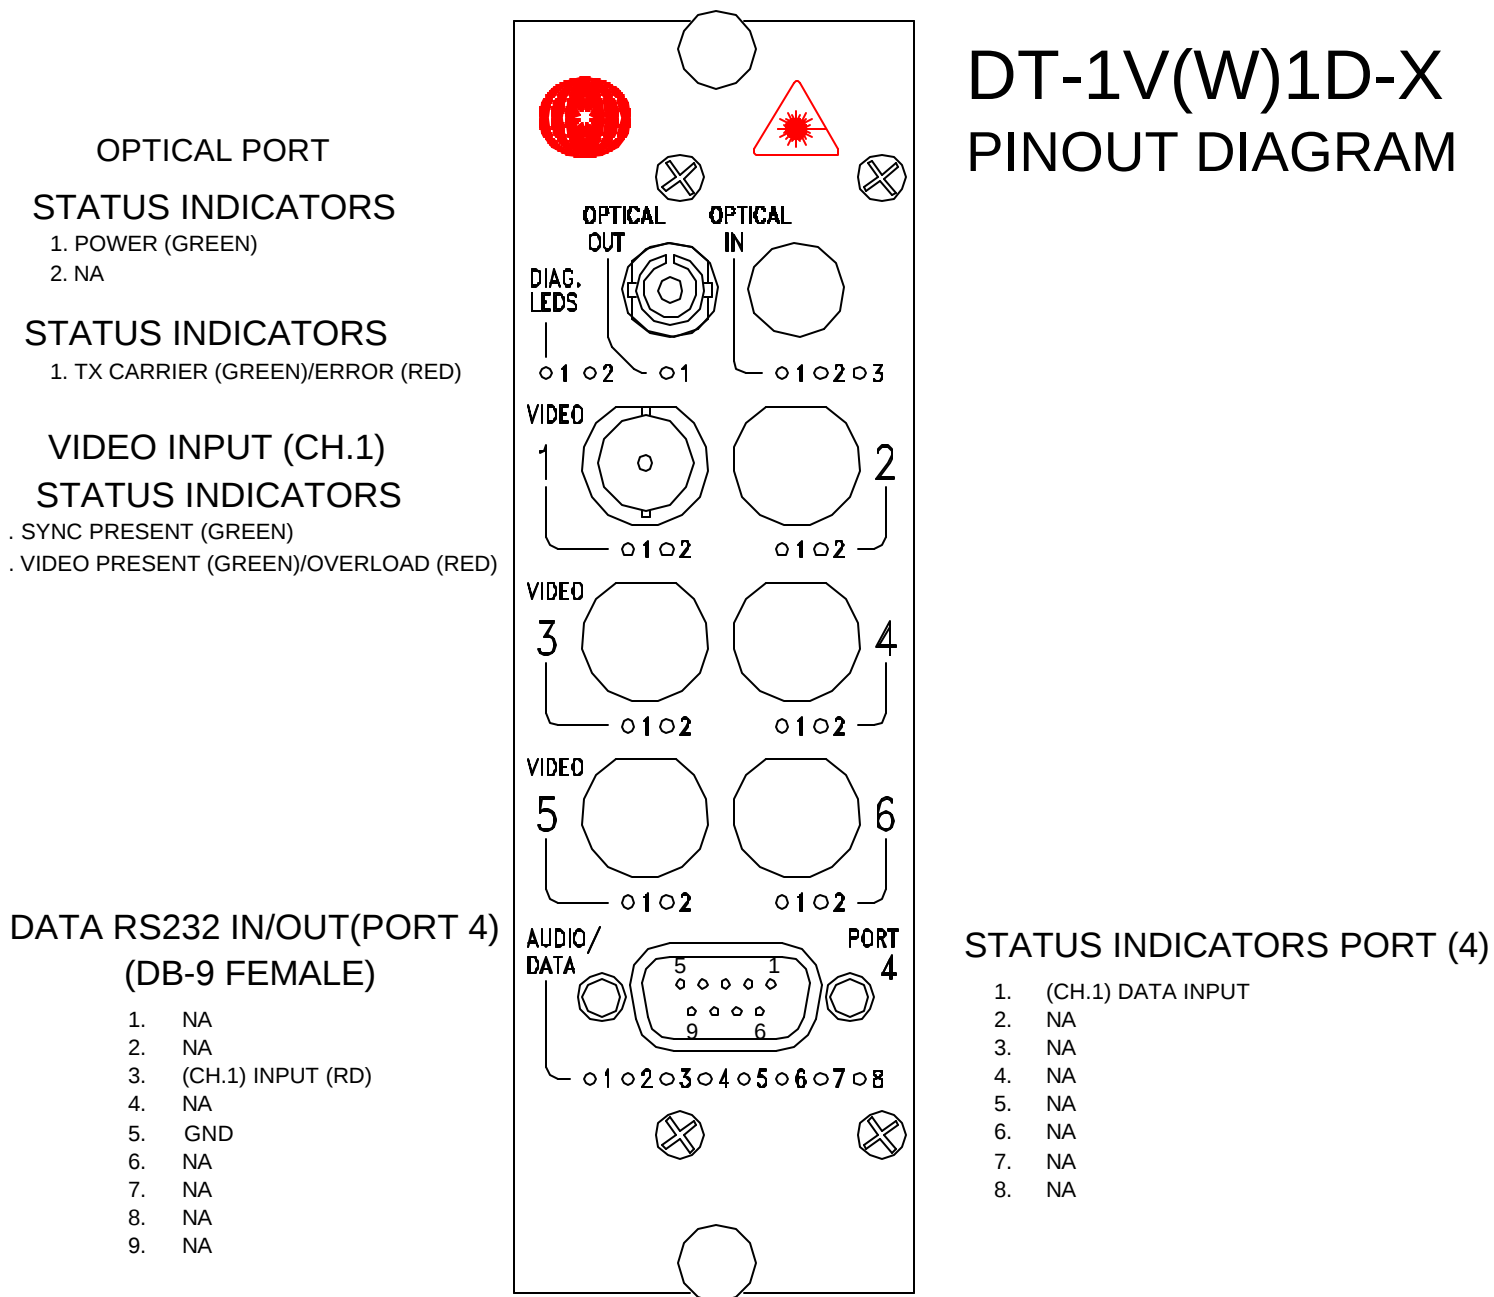


Figure 6.1
DT-1V(W)1D-x Front Panel Diagram

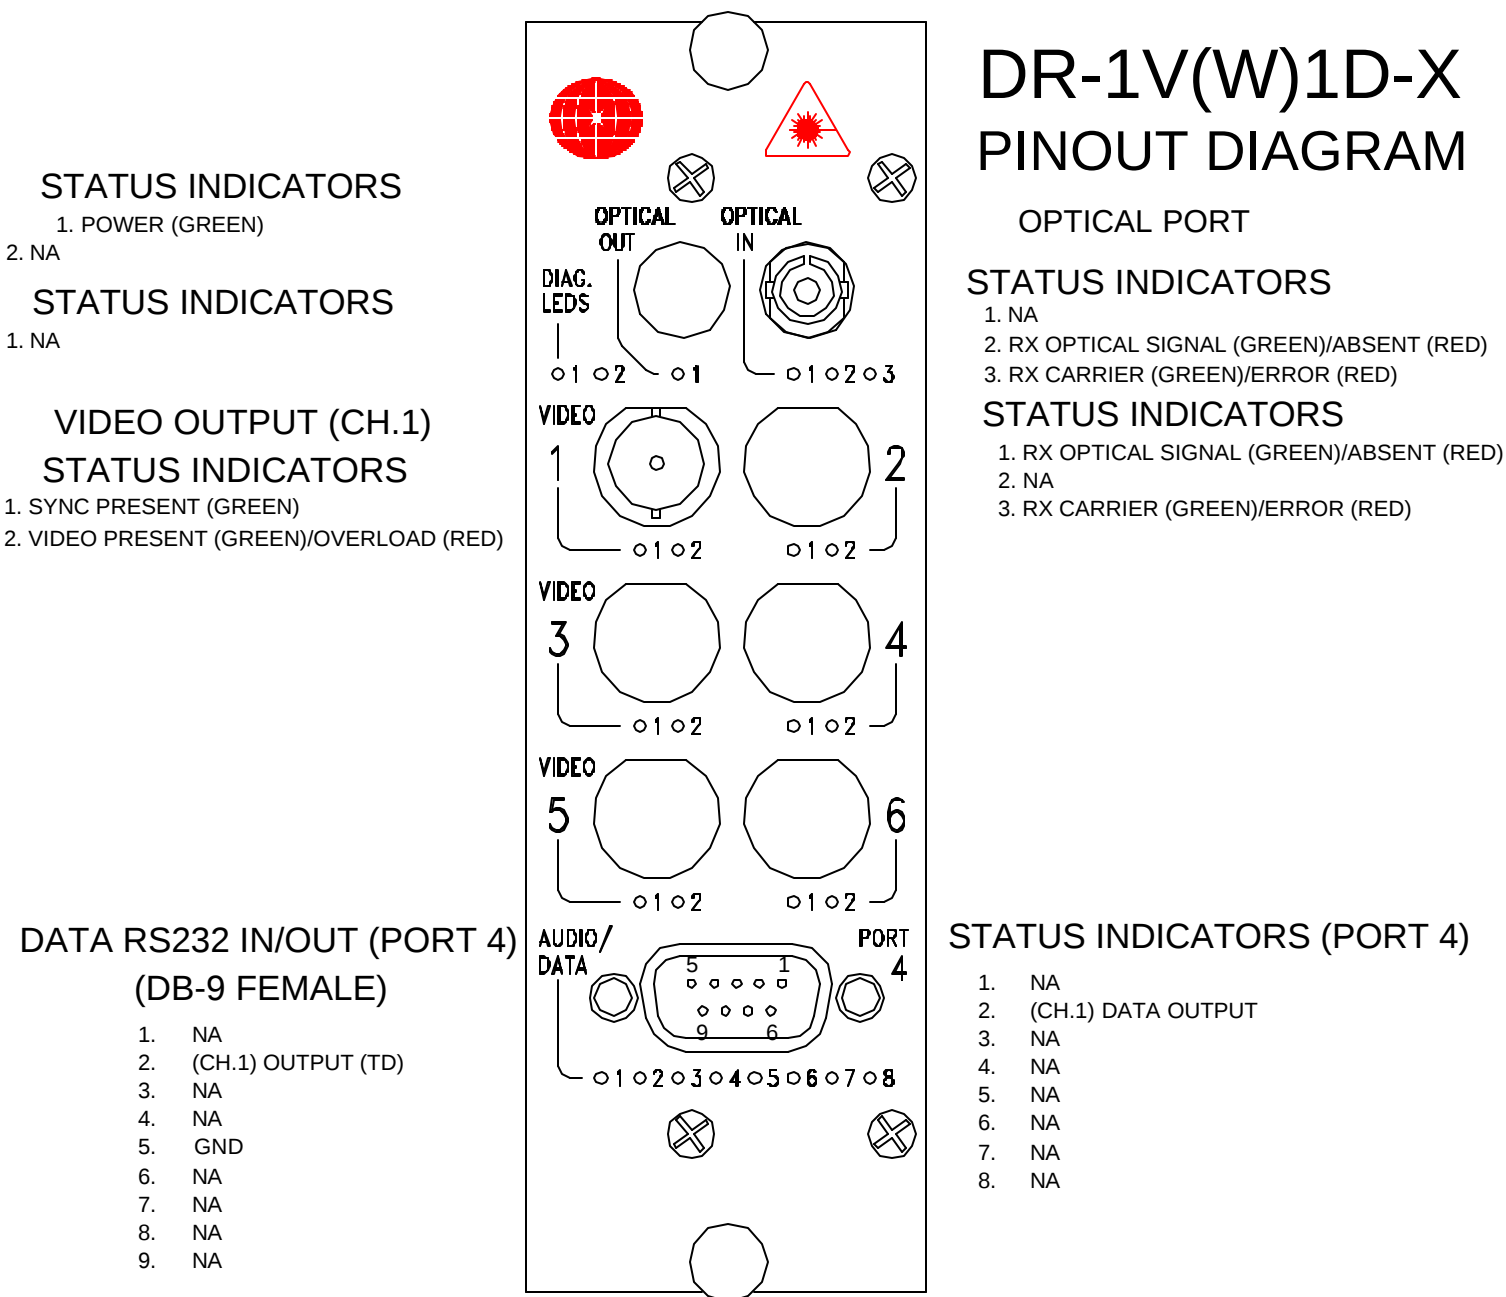


Figure 6.2
DR-1V(W)1D-x Front Panel Diagram

7.0 Troubleshooting

Below is a listing of several problems that may arise during the installation & operation of the modules. If you are having difficulty installing or operating the modules please refer to this list below.

Problem: *Module does not fit in chassis slots*

Action: Check module orientation. Meridian “Globe” must be oriented on the top left hand side of the module
Make sure the card guides in the chassis are aligned with the extrusion on the module

Problem: *Card power LED does not light when power to the module/subrack is applied or power indicator turns on and off*

Action: Check power supply to ensure that it is plugged in and turned on. If flashing continues, move module to another chassis or location in the same chassis, if available.

Problem: *No video at output of module*

Action: Check to ensure that the video channel-specific LEDs are on (Green). Also, check to ensure that the optical LEDs are ON (Green). If no video is still present, check to ensure that the monitor is ON and the video cable is connected to the correct video port on the Rx module.

Problem: *Video image is dark*

Action: Check the iris control on the camera to ensure that it is open to the proper amount for the conditions

Problem: *Video image is too bright and appears overexposed*

Action: Check the Video overload indicator on the Rx module. If it is Red, the video signal level is too high and the CCTV iris should be checked to ensure that it is open properly for the conditions.

Problem: *No Data*

Action: Check the channel data input status indicator lights #1, on the transmit module to ensure it is on (indicating a data input signal). Also check the associated channel data output status indicator lights #2, on the corresponding receiver module to ensure that the signal is being transmitted and received. If not, please check the data input/output and fiber connections.

If the problem still persists after reviewing the above items, please contact Meridian technical support (516-285-1000).

Appendix 1 – Applicable Product Part Number Variations

The table below indicates the part numbers and product description that are included in this manual. The pinout diagram in section 4.0 shows the connector pinouts (input/output connections) for the all-inclusive product. The appropriate modules consist of various combinations of 1 uni-directional Video/Data channels. Please use this table to determine the exact pinout and port location of the particular model of interest.

Product Part Number		# Video Channels & Type		# of Data Channels	Optical Connect	Fiber Type
Transmitter	Receiver	10-bit	8-bit			
DT-1V1D-1	DR-1V1D-1	--	1	1	ST	Multimode
DT-1V1D-3	DR-1V1D-3	--	1	1	FC	Singlemode
DT-1V1D-3ST	DR-1V1D-3ST	--	1	1	ST	Singlemode
DT-1W1D-1	DR-1W1D-1	1	--	1	ST	Multimode
DT-1W1D-3	DR-1W1D-3	1	--	1	FC	Singlemode
DT-1W1D-3ST	DR-1W1D-3ST	1	--	1	ST	Singlemode