




Installation/Operation Instructions

Fiber Optic Video & Data Transmission System

Part Number:

DT/DR-4W(V)4C1F/1C1F-x Series

(4-Channel Video Tx/Rx, 4-Channel Forward Contact Closure & 1-Channel Return Contact Closure, 1-Channel BI-DI RS-422 Data)

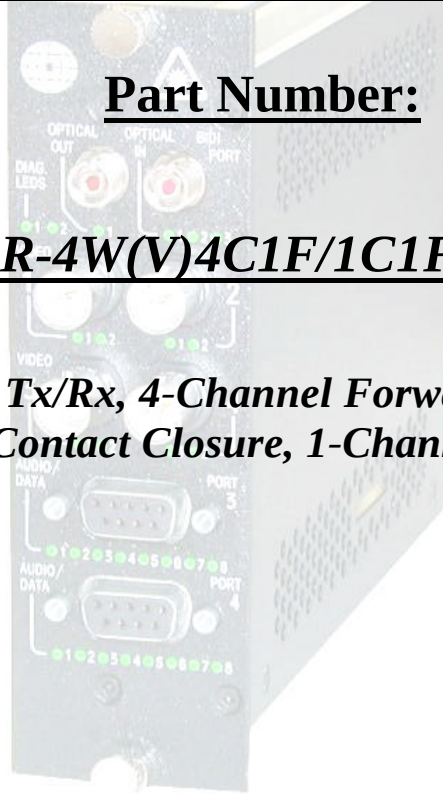

Meridian Technologies, Inc.

700 Elmont Road, Elmont NY 11003

Telephone : 516. 285. 1000 Fax: 516. 285. 6300

E-mail : sales@meridian-tech.com Web: www.meridian-tech.com

Document Version 1.0

02/27/2009

Table of Contents

1.0	Product Description	3
2.0	Installation.....	3
3.0	Product Signal Format & Specifications	4
3.1	Video & Data Status indicators.....	5
4.0	Contact Mapping SIM Signal Assignment	6
4.1	RS-422 SIM Signal Assignment	6
5.0	Front Panel Pinout Assignment Diagram	8
6.0	Product Part Number Variations.....	9
7.0	Troubleshooting.....	10

1.0 Product Description

Meridian's product series DT-4W(V)4C1F/1C1F and DR-4W(V)4C1F/1C1F are fiber optic modems that transmit four channels of uni-directional digitized video, channel of bi-directional contact closure, three channel of uni-directional contact closure and one channel of bi-directional RS-422 data signals over one optical fiber using digital-encoding transmission techniques. This product series uses Meridian's standard 2-slot wide chassis mount card assembly and plugs into the following Meridian chassis: SR-1000, SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis.

The digital modules consist of various plug-in personality function cards or SIMs. The top card is the optical card that contains the fiber optic interface. The optical input & output connectors are located on the right side of the module. The second and third SIMs contains the video coaxial interface (either one or two channels of uni-directional video). The fourth SIM card contains the bi-directional Contact Closure. The bottom SIM card contains the bi-directional RS-422 data signals.

2.0 Installation

Series -4W(V)4C1F/1C1F and DR-4W(V)4C1F/1C1F products are two-slot wide cards and, as such, occupy two slots in Meridian's standard chassis (SR-1000, SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis). To install in the chassis, orient the card with the Meridian logo at the top of the module and slide onto the top and bottom card guides in the chassis. Press securely on the top and bottom of the module to ensure that it is fully seated in the chassis so that the electrical connector mates with the chassis-mounted motherboard. Once installed, manually tighten the two thumbscrews located at the top and bottom of the card. Do not use tools to secure these and do not over tighten.

Note: A fully loaded subrack should have forced-air cooling to avoid excessive heat generation inside the chassis. A fan assembly tray (P/N FA-2000) with three (3) fans is available and should be installed under the 19" SR-2000/1 whenever possible.

3.0 Product Signal Format & Specifications

The DT & DR-4W(V)4C1F/1C1F-X series products transmit and receive the following signals:

Signal Type	Channels	DT-4W(V)4C1F/1C1F	DR-4W(V)4C1F/1C1F
NTSC/PAL video	4	Transmit	Receive
RS-422	1/1	Transmit / Receive	Receive / Transmit
Dry contact closure	4/1	Transmit / Receive	Receive / Transmit

The tables below identify the specifications for the various signals that these modems transmit/receive.

Video		
	8-bit Video	10-bit Video
Format	NTSC, PAL, SECAM	NTSC, PAL, SECAM
Voltage/Impedance	1Vp-p, 75 Ohm, 1.5Vp-p (max)	1Vp-p, 75 Ohm, 1.5Vp-p (max)
Differential Gain	<0.6%	<0.6%
Differential Phase	<0.3°	<0.3°
SNR	>60dB (weighted)	>67dB (weighted)
Return Loss	>30dB	>30dB
Field Tilt	<0.5%	<0.5%

Contact Mapping	
Input	Contact closure to ground
Output	Isolated contact closure outputs
Output Contact Rating	0.3A @ 30VAC/DC
Contact bounce time	5msec
Connectors	High Density DB15 Female

Data	
Formats	RS-422
Data Rate	DC to 300Kb/s
Bit Error Rate (BER)	Better than 10^{-9}

Connectors	
Video	75 Ohm BNC w/gold center pin
Dry contact closure	DB15 Female
Data	DB9 Female
Optical	Singlemode – ST or FC Multimode – ST

3.1 Video Status indicators

The figures at the end of this document show the connector and LED indicator locations for the various video & data status indicators on the transmitter and receiver modules. There are a number of diagnostic indicators on the front panel of each module. In addition, each of the video input/output channels has indicators associated with them to provide quick visual indications of the channel activity. These indicators for each of the video & data channels are listed below:

Transmitter (DT-4W(V)4C1F/1C1F-x) Indicators		
Indicator	Location	Function
Tx carrier	Under optical output connector	Optical output (Green – OK, Red – error)
Power	Left side of module	Green – ON
Video #1-4 (each input)	Under video input connectors	Green – Sync received
Video #1-4 (each input)	Under video input connectors	Video signal – Green OK, Red – video overload

Receiver (DR-4V(W)4C1F/1C1F-x) Indicators		
Indicator	Location	Function
Rx Optical signal	Under optical output connector	Optical input (Green – OK, Red – error)
Rx Carrier	Under optical output connector	Optical Carrier input (Green – OK, Red – error)
Power	Left side of module	Green – ON
Video #1-4 (each input)	Under video input connectors	Green – Sync received
Video #1-4 (each input)	Under video input connectors	Video signal – Green OK, Red – video overload

Each data input/output channel has two LED status indicators located under the associated data I/O connector. One LED is associated with each data input channel on the DR unit while the second LED is associated with the respective data output channel on the DT unit. The table below shows the relationship between the connectors (I/O channels) and LEDs.

4.0 Contact Mapping SIM Signal Assignment (Pinouts) & Indicator Lights

The tables below identifies the input/output functions, associated connector pinouts and LED status indicators for contact SIM card.

DT-4V4C1F/1C1F

Contact Mapping Connector Pinout Assignment (PORT 3)			Contact Mapping LED Status Indicators (PORT 3)
Pin #	DT-4V4C1F/1C1F	LED #	DR-4V4C1F/1C1F
1	Ch1 INPUT	1	Ch1 INPUT PRESENT
2	Ch2 INPUT	2	Ch1 OUTPUT PRESENT
3	Ch3 INPUT	3	Ch2 INPUT PRESENT
4	Ch4 INPUT	4	NA
5	GND	5	Ch3 INPUT PRESENT
6	Ch1 OUTPUT	6	NA
7	Ch1 OUTPUT	7	Ch4 INPUT PRESENT
8 - 15	NA	8	NA

DR-4V4C1F/1C1F

Contact Mapping Connector Pinout Assignment (PORT 3)			Contact Mapping LED Status Indicators (PORT 3)
Pin #	DR-4V4C1F/1C1F	LED #	DT-4V4C1F/1C1F
1	Ch1 INPUT	1	Ch1 INPUT PRESENT
2	NA	2	Ch1 OUTPUT PRESENT
3	NA	3	NA
4	NA	4	Ch2 OUTPUT PRESENT
5	GND	5	NA
6	Ch1 OUTPUT	6	Ch3 OUTPUT PRESENT
7	Ch1 OUTPUT	7	NA
8	Ch2 OUTPUT	8	Ch3 OUTPUT PRESENT
9	Ch2 OUTPUT		
10	Ch3 OUTPUT		
11	Ch3 OUTPUT		
12	Ch4 OUTPUT		
13	Ch4 OUTPUT		
14	NA		
15	NA		

4.1 RS-422 SIM Signal Assignment (Pinouts) & Indicator Lights

There is one data SIM cards, one transmits & one receives one RS-485 (4-wire) data channels. The data SIM has a DB9 female connector.

The table below shows the appropriate pinout for each of the connectors

RS-422 Data Connector Pinout Assignment (PORT 4)		
Pin #	DT-4V4C1F/1C1F (PORT 4)	DR-4V4C1F/1C1F (PORT 4)
1	Ch1 OUT (+)	Ch1 IN (+)
2	Ch1 OUT (-)	Ch1 IN (-)
3	NA	NA
4	NA	NA
5	Gnd	Gnd
6	Ch 1 IN (+)	Ch1 OUT (+)
7	Ch 1 IN (-)	Ch1 OUT (-)
8	NA	NA
9	NA	NA

The table below shows the LED status indicators associated with each data SIM

RS-422 Data Connector Status Indicators (PORT 4)		
LED #	DT-4V4C1F/1C1F (PORT 4)	DR-4V4C1F/1C1F (PORT 4)
1	Ch1 Data Input	N/A
2	N/A	Ch 1 Data Output
3	NA	N/A
4	N/A	N/A
5	N/A	Ch 1 Data Input
6	Ch1 Data Output	N/A
7	N/A	N/A
8	N/A	N/A

The data SIM can transmit or receive 4 channels of RS-422 data. The pinouts are shown in the table below:

There are no jumpers or switches for the user to configure for this data card.

Optical Specifications						
	Optical Output (dBm)	Rx Sensitivity (dBm)	Optical Budget (dB)	Wavelength (nm)	Optical connector	Optical Dynamic Range (dB)
Multimode (FP Laser) 62.5/125	-3	-24	21	1300/850	ST	24
Singlemode (FP Laser) 9/125	-3	-24	21	1310/1550	ST, FC	24
Singlemode (DFB Laser) 9/125	+3	-24	27	1310/1550	ST, FC	24

5.0 Front Panel Pinout Assignment Diagram

DT-4V4C1F/1C1F-X
DT-4W4C1F/1C1F-X

PINOUT DIAGRAM

*V-8 BIT VIDEO
*W-10 BIT VIDEO

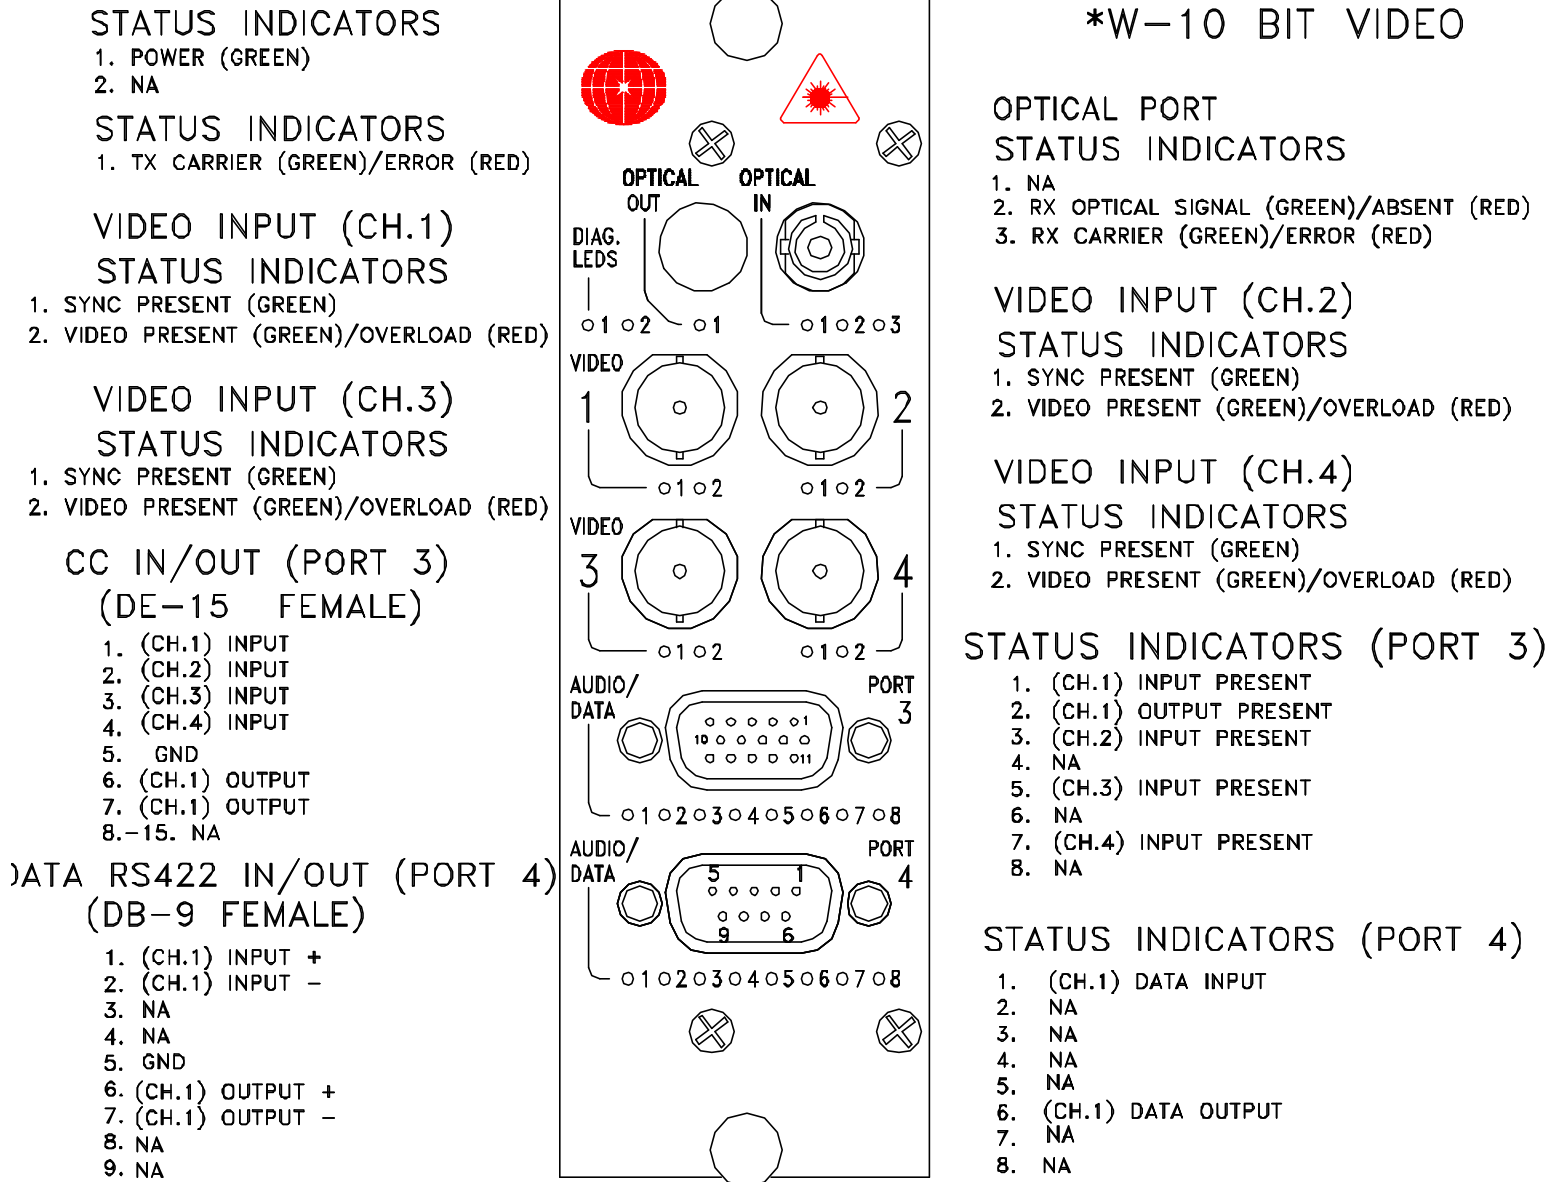


Figure 5.1
DT-4V(W)4C1F/1C1F-x Module Front Panel

DR-4V4C1F/1C1F-X DR-4W4C1F/1C1F-X

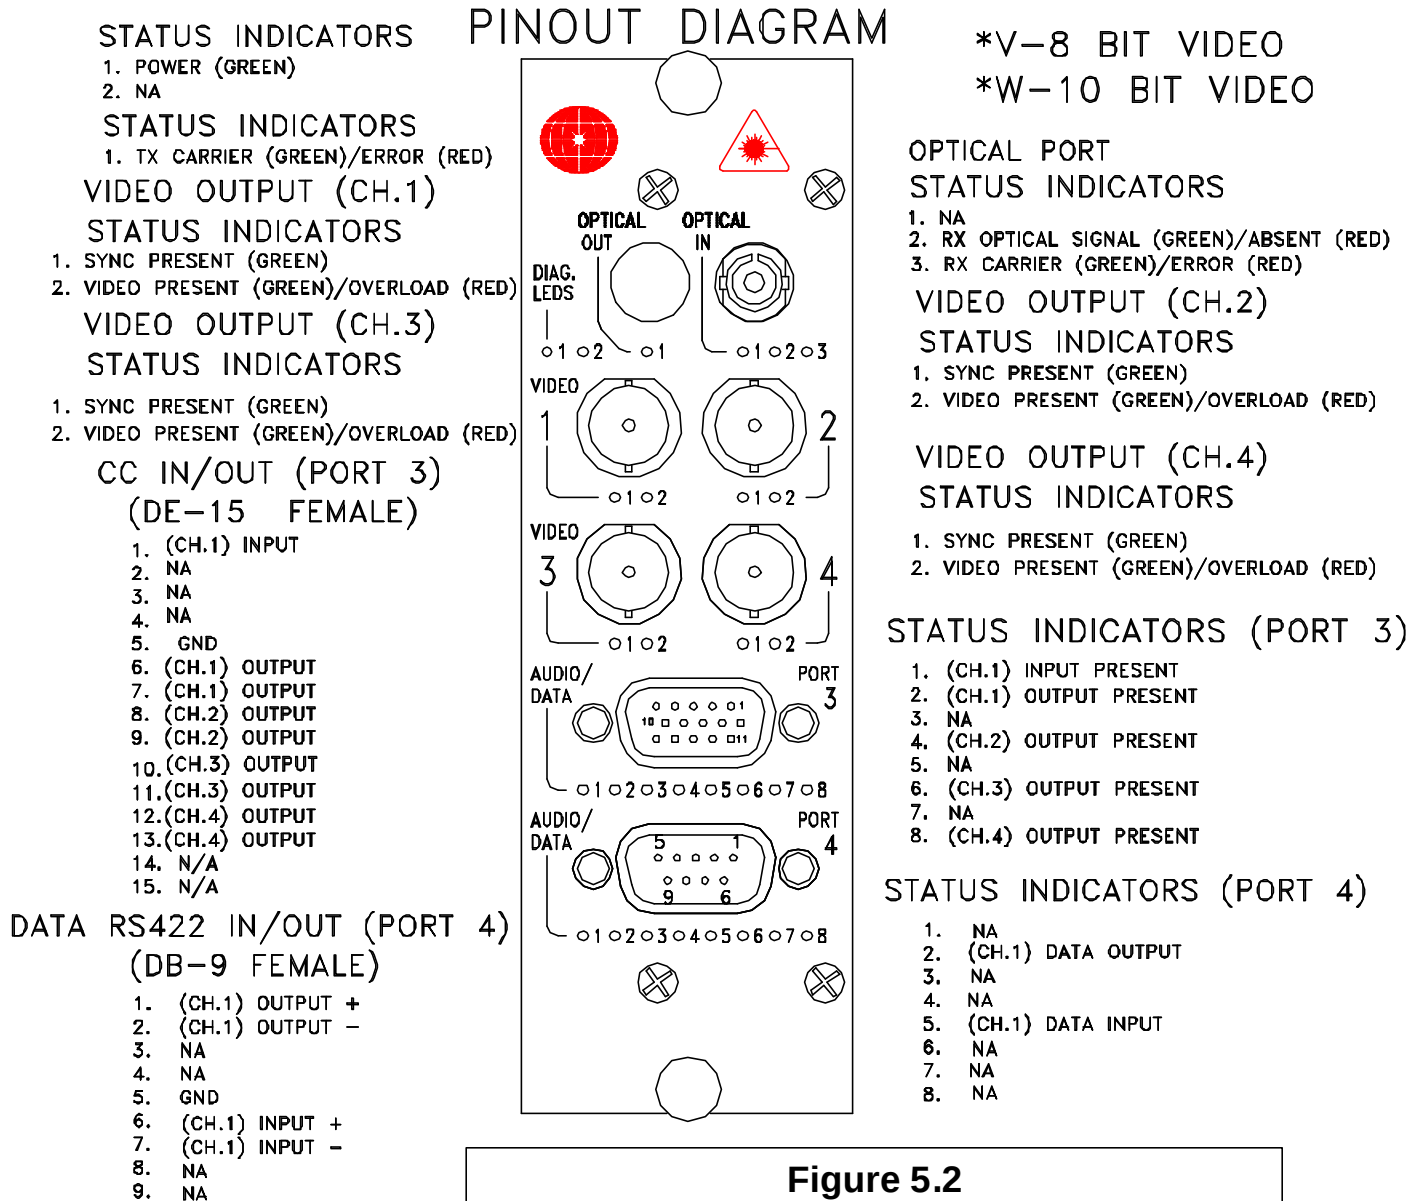


Figure 5.2
DR-4V(W)4C1F/1C1F-x Module Front Panel

6.0 Product Part Number Variations

The table below lists the various part numbers associated with different module types:
Basic module description:

Video: 4-channels, one way

Contact Closure: 1-channel bi-directional & 3-Channel uni-directional Contact Closure

Data: 1-channel, bi-directional RS-422 data

Transmitter	Receiver	Video Resolution	# Fibers & Type	Wavelength
DT-4W4C1F/1C1F-2	DR-4W4C1F/1C1F -2	10-bit	1 (MM)	1310/850nm
DT-4W4C1F/1C1F -5	DR-4W4C1F/1C1F 5	10-bit	1 (SM)	1310/1550nm
DT-4V4C1F/1C1F -2	DR-4V4C1F/1C1F -2	8-bit	1 (MM)	1310/850nm
DT-4V4C1F/1C1F -5	DR-4V4C1F/1C1F -5	8-bit	1 (SM)	1310/1550nm

For proper operation, it is necessary to match the transmitter (DT) with the associated receiver module (DR).

7.0 Troubleshooting

Below is a listing of several problems that may arise during the installation & operation of the modules. If you are having difficulty installing or operating the modules please refer to this list below.

Problem: *Module does not fit in chassis slots*

Action: Check module orientation. Meridian “Globe” must be oriented on the top left hand side of the module

Problem: *Card power LED does not light when power to the module/subrack is applied or power indicator turns on and off*

Action: Check power supply to ensure that it is plugged in and turned on. If flashing continues, move module to another chassis or location in the same chassis, if available.

Problem: *No video at output of module*

Action: Check to ensure that the video channel-specific LEDs are on (Green). Also, check to ensure that the optical LEDs are ON. If no video is still present, check to ensure that the monitor is ON and the video cable is connected to the correct video port on the Rx module.

Problem: *Video image is dark*

Action: Check the iris control on the camera to ensure that it is open to the proper amount for the conditions

Problem: *Video image is too bright and appears overexposed*

Action: Check the Video overload indicator on the Rx module. If it is Red, the video signal level is too high and the CCTV iris should be checked to ensure that it is open properly for the conditions.

Problem: *No Contact Closure transmission*

Action: Check the individual contact closure channel input status indicator lights #1 through 7 to ensure that the lights toggle on and off as the contact is closed and opened. These lights are located below the corresponding DB15. Also check the corresponding contact closure output lights (#2 through 7) on the receiver module to see if the corresponding lights are activated when the corresponding input contact is closed. If not, please check the data input/output and fiber connections.

Problem: *No Data*

Action: Check the data input status indicator light #1 on the transmit module to ensure it is on (indicating a data input signal). Also check the data output status indicator light #2 on the corresponding receiver module to ensure that the signal is being transmitted and received. If not, please check the data input/output and fiber connections. Ensure that the jumpers on the data Multi-protocol SIM are programmed properly to match the data format.

If the problem still persists after reviewing the above items, please contact Meridian technical support (516-285-1000).