



Installation/Operation Instructions

Fiber Optic Video & Data Transmission System



Meridian Technologies, Inc.
700 Elmont Road, Elmont NY 11003
Telephone: 516. 285. 1000 Fax: 516. 285. 6300
E-mail: sales@meridian-tech.com
Web: www.meridian-tech.com
Document Version 1.1
01/24/2011

Table of Contents

1.0	Product Description.....	3
2.0	Installation	3
3.0	Operation.....	3
3.1	Status indicators.....	4
4.0	Product Signal Format & Specifications	5
5.0	SIM Jumper Settings.....	6
6.0	Front Panel Pinout Assignment Diagram	7
7.0	Troubleshooting	9

1.0 Product Description

Meridian's product series DXA & DXB-8A are fiber optic modems that transmit and receive eight bi-directional audio channels over one optical fiber using digital transmission technologies (depending on part number). This product series uses Meridian's standard 2-slot wide chassis mount card assembly and plugs into the following Meridian chassis: SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis.

The digital modules consist of various plug-in personality function cards or SIMs. The top card is the optical card that contains the fiber optic interface. The optical output (Tx) connector is located on the left side of the module while the optical input (Rx) connector is adjacent to it on the right side of the module. Each of the four remaining SIM locations contains four unidirectional audio channel interfaces.

2.0 Installation

Series DXA-8A and DXB-8A products are two-slot wide cards and, as such, occupy two slots in Meridian's standard chassis (SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis). To install in the chassis, orient the card with the Meridian logo at the top of the module and slide onto the top and bottom card guides in the chassis. Press securely on the top and bottom of the module to ensure that it is fully seated in the chassis so that the electrical connector mates with the chassis-mounted motherboard. Once installed, manually tighten the two thumbscrews located at the top and bottom of the card. Do not use tools to secure these and do not over tighten.

Note: A fully loaded subrack should have forced-air cooling to avoid excessive heat generation inside the chassis. A fan assembly tray (P/N FA-2000) with three (3) fans is available and should be installed under the 19" SR-2000/1 whenever possible.

3.0 Operation

Connect the audio source to one of the channels' input pins as shown in section 4.0. Connect an audio output device to the associated channel's output pins on the other module. To obtain optimal performance, the audio input level should be set to 0dB. The audio output level will track the input level. Once proper operation is verified, the other channels can be connected per the pinout diagram in this manual.

3.1 Status indicators

Each audio input/output channel has four LED status indicators located under the associated audio I/O connector. Two of the LEDs are associated with each audio input channel and two are associated with the respective audio output channel. The table below shows the relationship between the connectors (I/O channels) and LEDs.

Audio Input/Output Status Indicators									
DXA-8A					DXB-8A				
LED	Port 1	Port 2	Port 3	Port 4	LED	Port 1	Port 2	Port 3	Port 4
1	In 1 Present	In 5 Present	Out 1 Present	Out 5 Present	1	Out 1 Present	Out 5 Present	In 1 Present	In 5 Present
2	In 1 Overload	In 5 Overload	Out 1 Overload	Out 5 Overload	2	Out 1 Overload	Out 5 Overload	In 1 Overload	In 5 Overload
3	In 2 Present	In 6 Present	Out 2 Present	Out 6 Present	3	Out 2 Present	Out 6 Present	In 2 Present	In 6 Present
4	In 2 Overload	In 6 Overload	Out 2 Overload	Out 6 Overload	4	Out 2 Overload	Out 6 Overload	In 2 Overload	In 6 Overload
5	In 3 Present	In 7 Present	Out 3 Present	Out 7 Present	5	Out 3 Present	Out 7 Present	In 3 Present	In 7 Present
6	In 3 Overload	In 7 Overload	Out 3 Overload	Out 7 Overload	6	Out 3 Overload	Out 7 Overload	In 3 Overload	In 7 Overload
7	In 4 Present	In 8 Present	Out 4 Present	Out 8 Present	7	Out 4 Present	Out 8 Present	In 4 Present	In 8 Present
8	In 4 Overload	In 8 Overload	Out 4 Overload	Out 8 Overload	8	Out 4 Overload	Out 8 Overload	In 4 Overload	In 8 Overload

Audio input PRESENT LEDs – Each of the LEDs associated with a specific audio input channel will light when the audio input source is connected and has a signal level greater than -6dB

Audio input OVERLOAD LEDs – when the audio input level of any channel exceeds +6dB, the associated audio channel input Overload LED will turn on indicating that the audio input level is too high and distortion on the output may result.

Audio output PRESENT LEDs – This light will turn on when the audio input on the transmit side is present, the PXA & PXB units are powered and the fiber is connected between the two modems.

Audio output OVERLOAD LEDs – These lights will light when the respective audio input on the transmit side is over +6dB. Since the audio output level will track the audio input level, this light should not illuminate when the audio input is below the overload condition (+6dB)

4.0 Product Signal Format & Specifications

The DXA/DXB-8A pinouts are shown in the table below:

DXA-8A					DXB-8A				
Pin Assignment	Port 1	Port 2	Port 3	Port 4	Pin Assignment	Port 1	Port 2	Port 3	Port 4
1	In 1 (-)	In 5 (-)	Out 1 (-)	Out 5 (-)	1	Out 1 (-)	Out 5 (-)	In 1 (-)	In 5 (-)
2	In 1 (+)	In 5 (+)	Out 1 (+)	Out 5 (+)	2	Out 1 (+)	Out 5 (+)	In 1 (+)	In 5 (+)
3	In 2 (-)	In 6 (-)	Out 2 (-)	Out 6 (-)	3	Out 2 (-)	Out 6 (-)	In 2 (-)	In 6 (-)
4	In 2 (+)	In 6 (+)	Out 2 (+)	Out 6 (+)	4	Out 2 (+)	Out 6 (+)	In 2 (+)	In 6 (+)
5	GND	GND	GND	GND	5	GND	GND	GND	GND
6	In 3 (-)	In 7 (-)	Out 3 (-)	Out 7 (-)	6	Out 3 (-)	Out 7 (-)	In 3 (-)	In 7 (-)
7	In 3 (+)	In 7 (+)	Out 3 (+)	Out 7 (+)	7	Out 3 (+)	Out 7 (+)	In 3 (+)	In 7 (+)
8	In 4 (-)	In 8 (-)	Out 4 (-)	Out 8 (-)	8	Out 4 (-)	Out 8 (-)	In 4 (-)	In 8 (-)
9	In 4 (+)	In 8 (+)	Out 4 (+)	Out 8 (+)	9	Out 4 (+)	Out 8 (+)	In 4 (+)	In 8 (+)

The attached figures show the module front panel and associated connector location & pinouts.

The tables below identify the specifications for the various signals that these modems transmit/receive.

Audio	
In/Out Impedance	600 Ω , unbalanced/unbalanced
Frequency Response	10Hz to 20KHz
SNR	>90dB (weighted) @ 1KHz
In/Out Level	-6 to +6dBm (4Vp-p, max)
THD	<0.01% @ 1KHz
Digitized Resolution	24 bit


Connectors	
Audio	DB9 Female
Optical	Singlemode – ST or FC Multimode - ST

Optical Specifications						
Fiber Type/Size (um)	Optical Output (dBm)	Rx Sensitivity (dBm)	Optical Budget (dB)	Wavelength (nm)	Optical connector	Optical Dynamic Range (dB)
Multimode (FP Laser) 62.5/125	-3	-24	21	1300/850	ST	24
Singlemode (FP Laser) 9/125	-3	-24	21	1310/1550	ST, FC	24
Singlemode (DFB Laser) 9/125	+3	-24	27	1310/1550	ST, FC	24

5.0 Audio SIM Jumper Settings

Each audio SIM has 8 jumpers on it (located directly behind the DB9 connector). There are two jumpers for each channel. These jumpers are used to set the input/output impedance of the audio channels. Each audio input channel can be set to 600ohm, balanced or 47kohm, unbalanced input impedance. Each audio output channel's impedance can be set to either 600 ohm, balanced or low impedance. The default setting is 600 ohm, balanced.

The figures below illustrate these jumpers and how they are configured

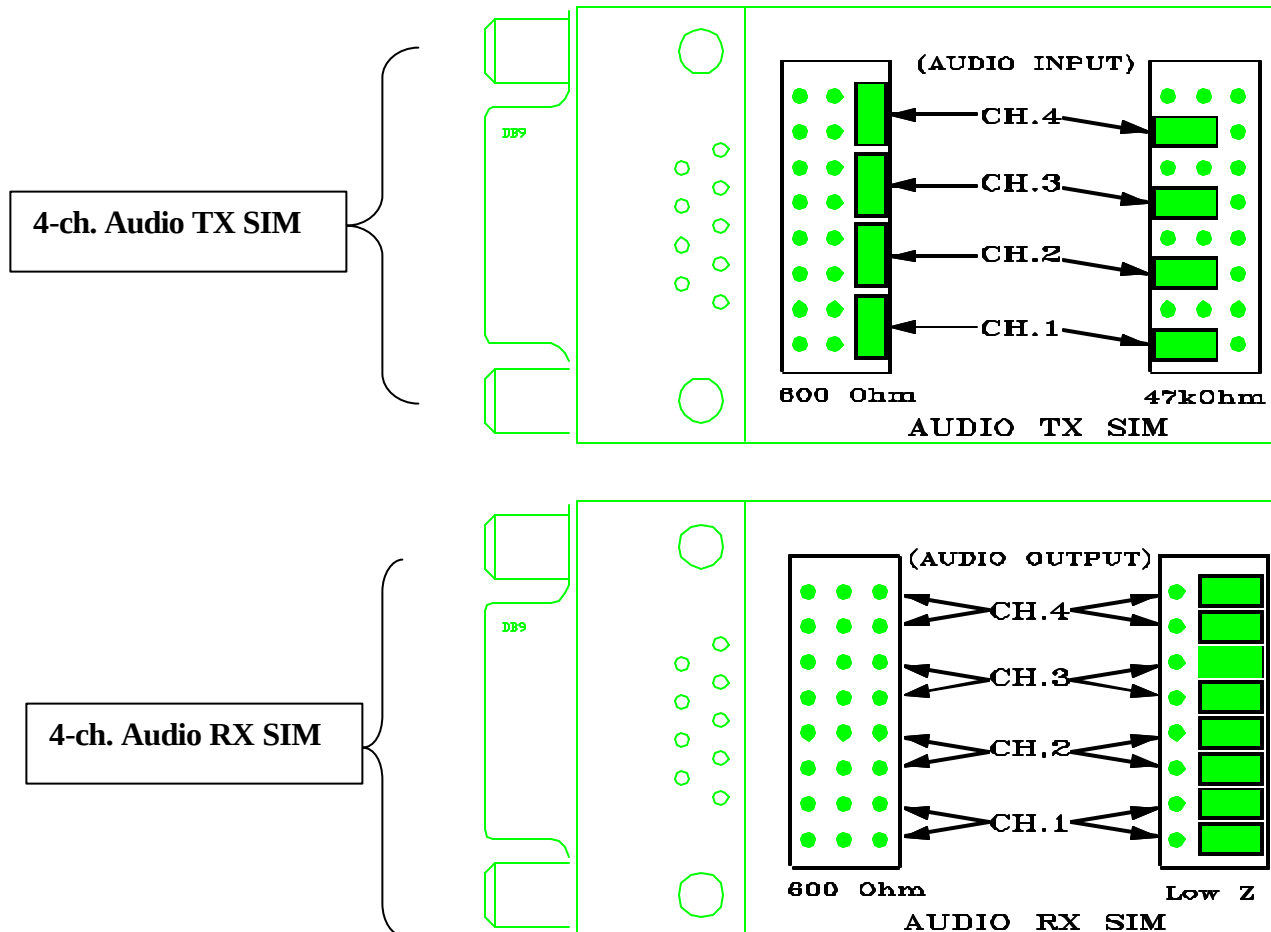

6.0 Front Panel Pinout Assignment Diagram

Figures 6.1 and 6.2 below show the front panel layout, connector location and pinout assignment for both the DT & DR modules.

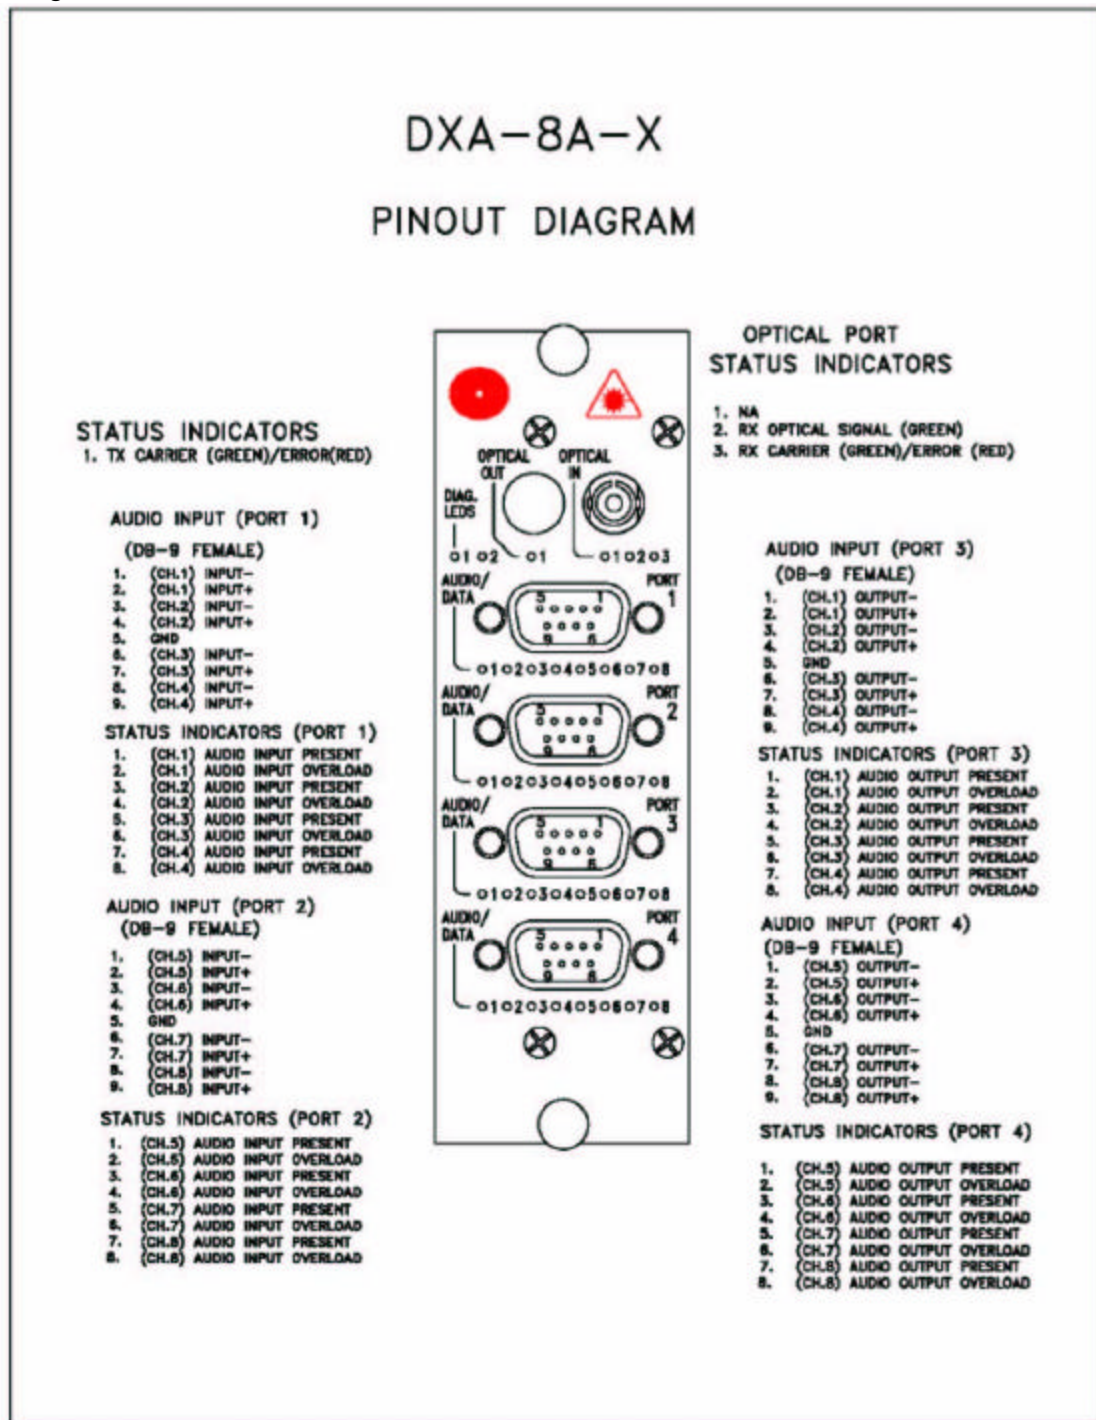


Figure 6.1
DXA-8A Front Panel Diagram

DXB-8A-X

PINOUT DIAGRAM

STATUS INDICATORS

1. TX CARRIER (GREEN)/ERROR(RED)

STATUS INDICATORS

1. POWER (green)
2. NA

AUDIO INPUT (PORT 1)

(DB-9 FEMALE)

1. (CH.1) OUTPUT-
2. (CH.1) OUTPUT+
3. (CH.2) OUTPUT-
4. (CH.2) OUTPUT+
5. GND
6. (CH.3) OUTPUT-
7. (CH.3) OUTPUT+
8. (CH.4) OUTPUT-
9. (CH.4) OUTPUT+

STATUS INDICATORS (PORT 1)

1. (CH.1) AUDIO OUTPUT PRESENT
2. (CH.1) AUDIO OUTPUT OVERLOAD
3. (CH.2) AUDIO OUTPUT PRESENT
4. (CH.2) AUDIO OUTPUT OVERLOAD
5. (CH.3) AUDIO OUTPUT PRESENT
6. (CH.3) AUDIO OUTPUT OVERLOAD
7. (CH.4) AUDIO OUTPUT PRESENT
8. (CH.4) AUDIO OUTPUT OVERLOAD


AUDIO INPUT (PORT 2)

(DB-9 FEMALE)

1. (CH.5) OUTPUT-
2. (CH.5) OUTPUT+
3. (CH.6) OUTPUT-
4. (CH.6) OUTPUT+
5. GND
6. (CH.7) OUTPUT-
7. (CH.7) OUTPUT+
8. (CH.8) OUTPUT-
9. (CH.8) OUTPUT+

STATUS INDICATORS (PORT 2)

1. (CH.5) AUDIO OUTPUT PRESENT
2. (CH.5) AUDIO OUTPUT OVERLOAD
3. (CH.6) AUDIO OUTPUT PRESENT
4. (CH.6) AUDIO OUTPUT OVERLOAD
5. (CH.7) AUDIO OUTPUT PRESENT
6. (CH.7) AUDIO OUTPUT OVERLOAD
7. (CH.8) AUDIO OUTPUT PRESENT
8. (CH.8) AUDIO OUTPUT OVERLOAD

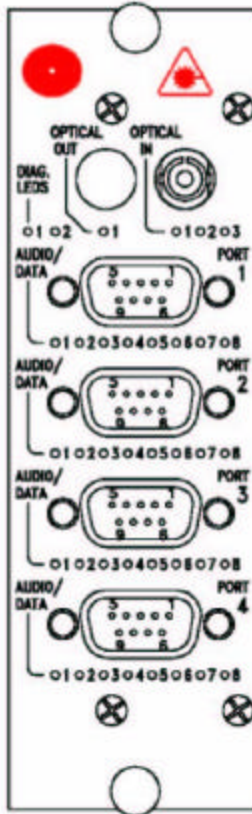

OPTICAL PORT STATUS INDICATORS

1. NA
2. RX OPTICAL SIGNAL (GREEN)
3. RX CARRIER (GREEN)/ERROR (RED)

AUDIO INPUT (PORT 3)

(DB-9 FEMALE)

1. (CH.1) INPUT-
2. (CH.1) INPUT+
3. (CH.2) INPUT-
4. (CH.2) INPUT+
5. GND
6. (CH.3) INPUT-
7. (CH.3) INPUT+
8. (CH.4) INPUT-
9. (CH.4) INPUT+

STATUS INDICATORS (PORT 3)

1. (CH.1) AUDIO INPUT PRESENT
2. (CH.1) AUDIO INPUT OVERLOAD
3. (CH.2) AUDIO INPUT PRESENT
4. (CH.2) AUDIO INPUT OVERLOAD
5. (CH.3) AUDIO INPUT PRESENT
6. (CH.3) AUDIO INPUT OVERLOAD
7. (CH.4) AUDIO INPUT PRESENT
8. (CH.4) AUDIO INPUT OVERLOAD

AUDIO INPUT (PORT 4)

(DB-9 FEMALE)

1. (CH.5) INPUT-
2. (CH.5) INPUT+
3. (CH.6) INPUT-
4. (CH.6) INPUT+
5. GND
6. (CH.7) INPUT-
7. (CH.7) INPUT+
8. (CH.8) INPUT-
9. (CH.8) INPUT+

STATUS INDICATORS (PORT 4)

1. (CH.5) AUDIO INPUT PRESENT
2. (CH.5) AUDIO INPUT OVERLOAD
3. (CH.6) AUDIO INPUT PRESENT
4. (CH.6) AUDIO INPUT OVERLOAD
5. (CH.7) AUDIO INPUT PRESENT
6. (CH.7) AUDIO INPUT OVERLOAD
7. (CH.8) AUDIO INPUT PRESENT
8. (CH.8) AUDIO INPUT OVERLOAD

Figure 6.2
DXB-8A Front Panel Diagram

7.0 Troubleshooting

Below is a listing of several problems that may arise during the installation & operation of the modules. If you are having difficulty installing or operating the modules please refer to this list below.

Problem: *Module does not fit in chassis slots*

Action: Check module orientation. Meridian “Globe” must be oriented on the top left hand side of the module
Make sure the card guides in the chassis are aligned with the extrusion on the module

Problem: *Card power LED does not light when power to the module/subrack is applied or power indicator turns on and off*

Action: Check power supply to ensure that it is plugged in and turned on. If flashing continues, move module to another chassis or location in the same chassis, if available.

Problem: *No Audio*

Action: Check the audio input status indicator lights on the transmit module to ensure that they are on (indicating an audio input signal). Also check the audio output status indicator lights on the corresponding receiver module to ensure that the signal is being transmitted and received. If not, please check the audio input/output and fiber connections.

Problem: *Low Audio output*

Action: Check to ensure that the input/output impedance properly matches the impedance of the audio input source and output device.

Problem: *Audio distortion on output*

Action: Check the status of the associated channel input/output Overload LEDs. If they are on, reduce the audio input level at the source to bring it below the overload condition. This should resolve problem.

If the problem still persists after reviewing the above items, please contact Meridian technical support (516-285-1000).



Meridian Technologies, Inc.
700 Elmont Road, Elmont NY 11003
Telephone: 516-285-1000 Fax: 516-285-6300
E-mail: sales@meridian-tech.com
Web: www.meridian-tech.com
Document Version 1.1
01/24/2011