SONY VISCA RS-422 CONNECTION DIAGRAM

ST-1W1F/1F-X

OPTICAL PORT (ST, FC)

STATUS INDICATORS

PWR - POWER (GREEN)
DIAG - NA
TX C/L - TX CARRIER (GREEN) / OVERLOAD (RED)
RX C/E - RX CARRIER (GREEN) / ERROR (RED)

VIDEO INPUT

STATUS INDICATORS

SYN - SYNC PRESENT (GREEN)
VID - VIDEO PRESENT (GREEN) / OVERLOAD (RED)

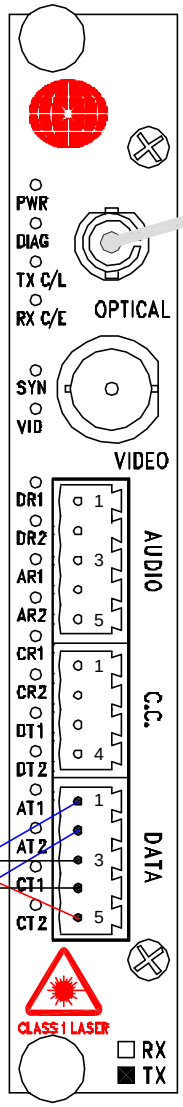

FIBER

STATUS INDICATORS

DR1 -	(CH.1) DATA OUTPUT
DR2 -	NA
AR1 -	NA
AR2 -	NA
CR1 -	NA
CR2 -	NA
DT1 -	(CH.1) DATA INPUT
DT2 -	NA
AT1 -	NA
AT2 -	NA
CT1 -	NA
CT2 -	NA

DATA INPUT/OUTPUT

1. (CH.1) DATA INPUT -
2. (CH.1) DATA INPUT +
3. (CH.1) DATA OUTPUT-
4. (CH.1) DATA OUTPUT+
5. GND

SR-1W1F/1F-X

STATUS INDICATORS

DR1 -	(CH.1) DATA OUTPUT
DR2 -	NA
AR1 -	NA
AR2 -	NA
CR1 -	NA
CR2 -	NA
DT1 -	(CH.1) DATA INPUT
DT2 -	NA
AT1 -	NA
AT2 -	NA
CT1 -	NA
CT2 -	NA

DATA INPUT/OUTPUT

1. (CH.1) DATA INPUT -
2. (CH.1) DATA INPUT +
3. (CH.1) DATA OUTPUT-
4. (CH.1) DATA OUTPUT+
5. GND

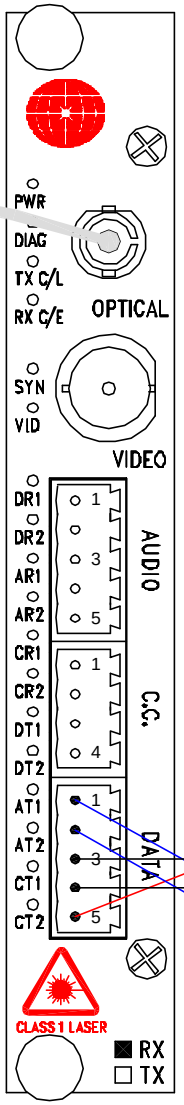

OPTICAL PORT (ST, FC)

STATUS INDICATORS

PWR - POWER (GREEN)
DIAG - NA
TX C/L - TX CARRIER (GREEN) / OVERLOAD (RED)
RX C/E - RX CARRIER (GREEN) / ERROR (RED)

VIDEO OUTPUT

STATUS INDICATORS

SYN - SYNC PRESENT (GREEN)
VID - VIDEO PRESENT (GREEN) / OVERLOAD (RED)

First EVI-D70

VISCA RS-422 connector

9	RXD OUT -
8	RXD OUT +
7	NC
6	NC
5	GND
4	RXD IN -
3	RXD IN +
2	TXD IN -
1	TXD IN +

RM-BR300 Remote Control Unit

VISCA RS-422 connector

1	NC
2	NC
3	NC
4	NC
5	GND
6	RXD IN -
7	RXD IN +
8	TXD IN -
9	TXD IN +

MERIDIAN TECHNOLOGEIS INC.
FILE NAME: STSR-1W1F-1F SONY VISCA RS422 CONNECTION.DWG
10/14/2008 V.0