



Fiber Optic Video/Audio/Data Transmission System

Installation Instructions

Part Number:

ST-1W1A2D/1A2D-x (ST/FC)

(Video Transmitter w/bi-directional Audio & Data)

SR-1W1A2D/1A2D-x (ST/FC)

(Video Receiver w/bi-directional Audio & Data)

Meridian Technologies, Inc.
700 Elmont Road, Elmont NY 11003
Telephone : 516. 285. 1000 Fax: 516. 285. 6300
E-mail : sales@meridian-tech.com Web: www.meridian-tech.com

Document Version 1

06/17/2018

Table of Contents

1.0 Product Description.....	3
2.0 Installation.....	3
3.0 Product Signal Format & Specifications	4
4.0 Data Connector Pin Assignment.....	5
5.0 Signal Conditioning Switch/Jumper Settings	7
5.1 Data Selection jumpers.....	7
5.2 Data Format Selection	8
6.0 SpectraView™ Network Diagnostics	9
7.0 Optical Specifications	9
8.0 Troubleshooting	10

ST/SR-1W1A2D/1A2D-x

Fiber Optic Video/Audio/Data Transmission System

Installation Instructions

1.0 Product Description

Meridian's ST/SR-1W1A2D/1A2D-x products are fiber optic modems that transmit one channel of uni-directional 10-bit video, one channel of bi-directional audio channel, and two channel bi-directional RS-232 data signals over one optical fiber using digital transmission technologies. This product series uses Meridian's standard 1-slot wide chassis mount card assembly and plugs into the following Meridian chassis: SR-500/S, SR-1000/S, SR-1001/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series equipment chassis.

Both ST and FC optical connectors are supported, depending on the part number. An ST optical interface is available for both multimode and singlemode fiber applications. The FC optical interface is available only for singlemode products. Conformal coating provides an additional level of protection from environments with high humidity.

2.0 Installation

Series ST/SR-1W1A2D/1A2D-x products are one-slot wide cards and, as such, occupy one slot in Meridian's stand-alone chassis (SR-500/S, SR-1000/S, SR-1002/S) or Meridian's standard 19" equipment chassis (SR-2000 series). To install the card in to the chassis, orient the card with the Meridian logo at the top of the module and slide onto the top and bottom card guides in the chassis. Press securely on the top and bottom of the module to ensure that it's fully seated and card's electrical connector fully inserted in to the chassis-mounted motherboard. Once installed, manually tighten the two thumbscrews located at the top and bottom of the card. Do not use tools to secure these and do not over tighten.

Note: A fully loaded 19" sub-rack should have forced-air cooling to avoid excessive heat generation inside the chassis. A fan assembly tray (P/N FA-2000) with three (3) fans is available and should be installed under the 19" SR-2000/1 whenever possible.

3.0 Product Signal Format & Specifications

The ST/SR-1W1A2D/1A2D-x series products transmit and receive the following signals:

Signal Type	Channels	Transmit	Receive
NTSC/PAL video	1	ST-1W1A2D/1A2D-X	SR-1W1A2D/1A2D-X
Audio	1	Yes	Yes
RS-232 (Tx & Rx data)	2	Yes	Yes

The tables below identify the specifications for the various signals that these modems transmit/receive.

Video	
Format	NTSC, PAL, SECAM
Voltage/Impedance	1Vp-p, 75 Ohm, 1.5Vp-p (max)
Differential Gain	<0.6%
Differential Phase	<0.3°
SNR	>67dB (weighted)
Return Loss	>30dB
Field Tilt	<0.5%
Audio	
In/Out Impedance	600 Ohm, unbalanced/unbalanced
Frequency Response	10Hz to 20KHz
SNR	>90dB (weighted) @ 1KHz
In/Out Level	-8 to +8 dBm (4Vp-p, max)
THD	<0.01% @ 1KHz
Digitized Resolution	24 bit
Data	
Formats	RS-232
Date Rate (RS-232)	DC to 125Kb/s
Bit Error Rate (BER)	Better than 10 ⁻⁹
Connectors	
Video	75 Ohm BNC w/gold center pin
Audio	14 pin terminal strip (one 5 pin connector)
Data	14 pin terminal strip (one 5 pin connector)
Optical	Singlemode – ST or FC Multimode - ST

The 14 pin terminal block connectors on the front of the module are used for audio, data interfaces. This module supports the following data formats:


RS-232 - Two full speed bi-directional channels (Tx/Rx).

4.0 Connector Pins Assignment

The Screw Terminal connectors on the front panel of the module are used for the Audio, Contact Closure and Data interfaces.


ST-1W1A2D/1A2D-x

PINOUT DIAGRAM

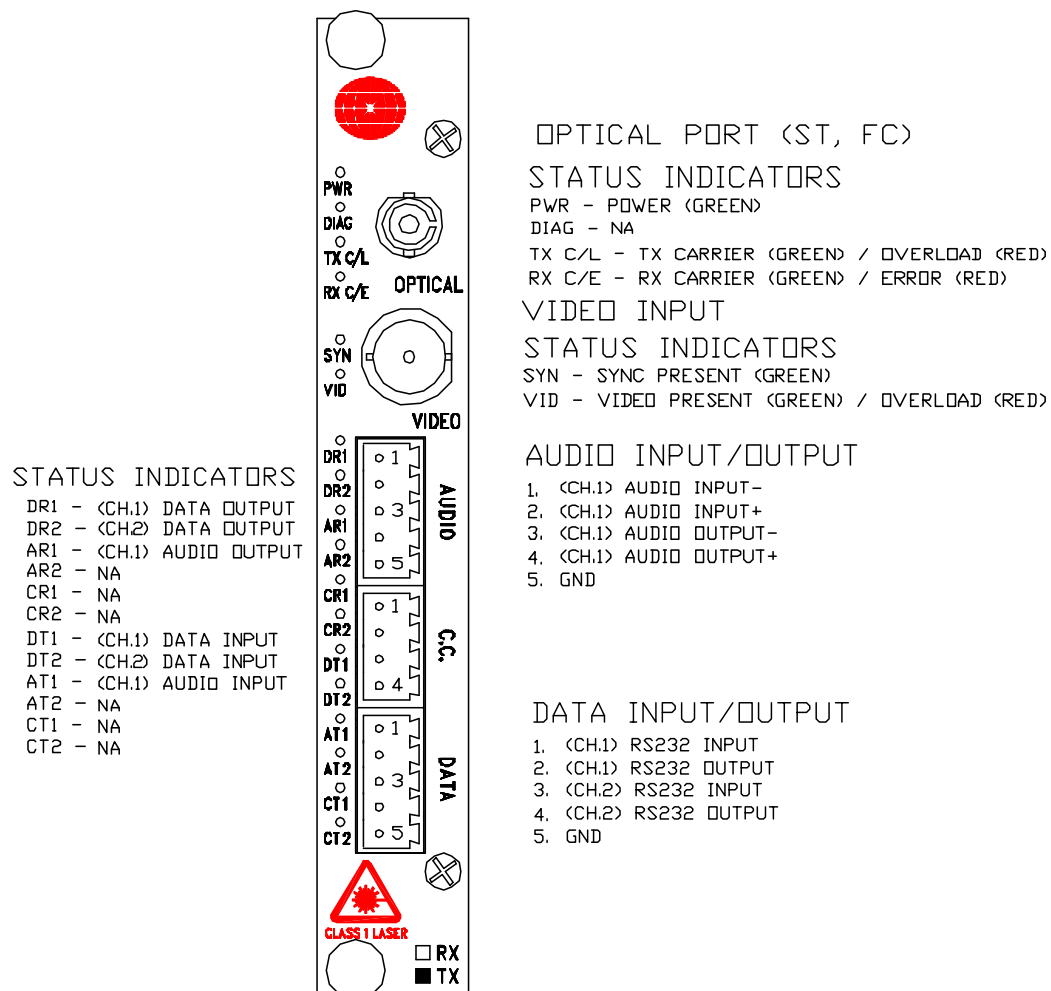

SR-1W1A2D/1A2D-x

PINOUT DIAGRAM

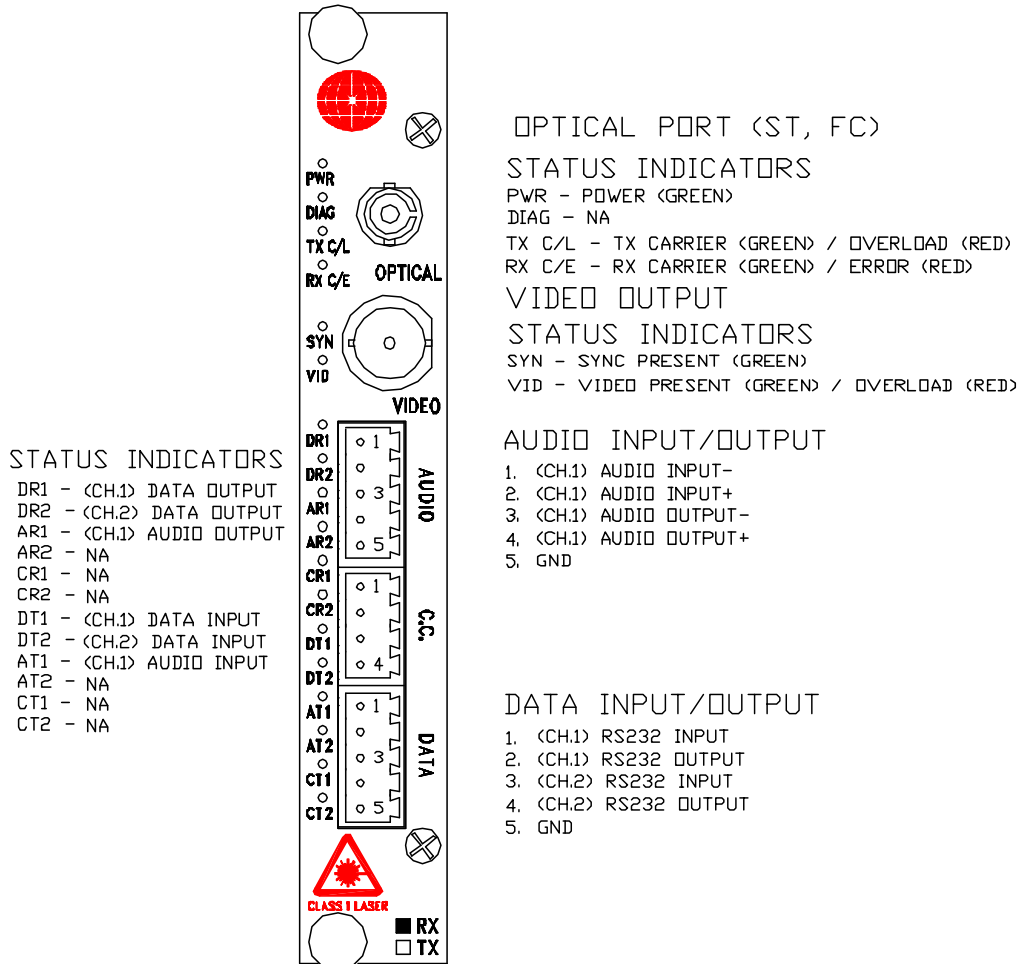

5.0 Signal Conditioning Switch/Jumper Settings

The sections below illustrate how to change the various data configurations.

5.1 Audio Impedance & Data Selection jumpers

Audio Impedance - The input / Output impedance of each of the audio channels can be changed between 600 Ohm balanced and 47K Ohm unbalanced. The default impedance is 600 Ohm.

There are sixteen (16) 3-pin jumpers located directly behind the 14-pin screw terminal Audio/Data connector (Fig.2). The top 8 jumpers are used to select the Input / Output Audio Impedance. The jumpers 9 and 10 are N/C. The jumpers 11-16 are used for 2 & 4-wire RS-485 selection and removing the default 120 Ohm load on the RS-422 input channels.

The illustration below (Fig.1) describes the function of each of these 16 jumpers. The jumpers are shown in their default positions.

Pos.1 / Pos.2		Fig. 1
Jumper 1		N/A
Jumper 2		Audio Ch 1 (+) (OUT) – 600 Ohm / Low Z
Jumper 3		Audio Ch 1 (-) (OUT) – 600 Ohm / Low Z
Jumper 4		N/A
Jumper 5		N/A
Jumper 6		N/A
Jumper 7		Audio Ch 1 (+) (IN) – 47KOhm / 600Ohm
Jumper 8		Audio Ch 1 (-) (IN) – 47KOhm / 600Ohm
Jumper 9		N/A
Jumper 10		N/A
Jumper 11		RS-485 (4-wire/2-wire selection) – 4-wire default
Jumper 12		RS-485 (4-wire/2-wire selection) – 4-wire default
Jumper 13		RS-422 Ch 1 (IN) – 120 Ohm load – ON default
Jumper 14		Reserved
Jumper 15		Reserved
Jumper 16		N/A

***RS-232 FACTORY SETTINGS NOTE:**

This setting can be preconfigured to any data selection by customer request.

5.2 Data Format Selection


A group of 10 switches is located on the bottom center of the module's circuit card (Fig.2). The left four (4) switches determine the data format that is transmitted/received. These switches must be set to the same positions on both the Tx and Rx cards in order to properly transmit data. Refer to table below and Fig.2 for the proper Format Selection Settings.

The factory-supplied default setting is for RS-232 data (Switch #1-4 OFF (up)).

Data Format Selection Switch Settings				
	Switch #1	Switch #2	Switch #3	Switch #4
RS-232	OFF (up)	OFF (up)	OFF (up)	OFF (up)
RS-422	ON (down)	ON (down)	OFF (up)	OFF (up)
RS-485 (2-wire)	OFF (up)	ON (down)	ON (down)	OFF (up)
RS-485 (4-wire)	OFF (up)	ON (down)	OFF (up)	OFF (up)

The remaining Switches #5-10 should be in the OFF (up) position.

1-Slot Module Data Format Selection Switch Location

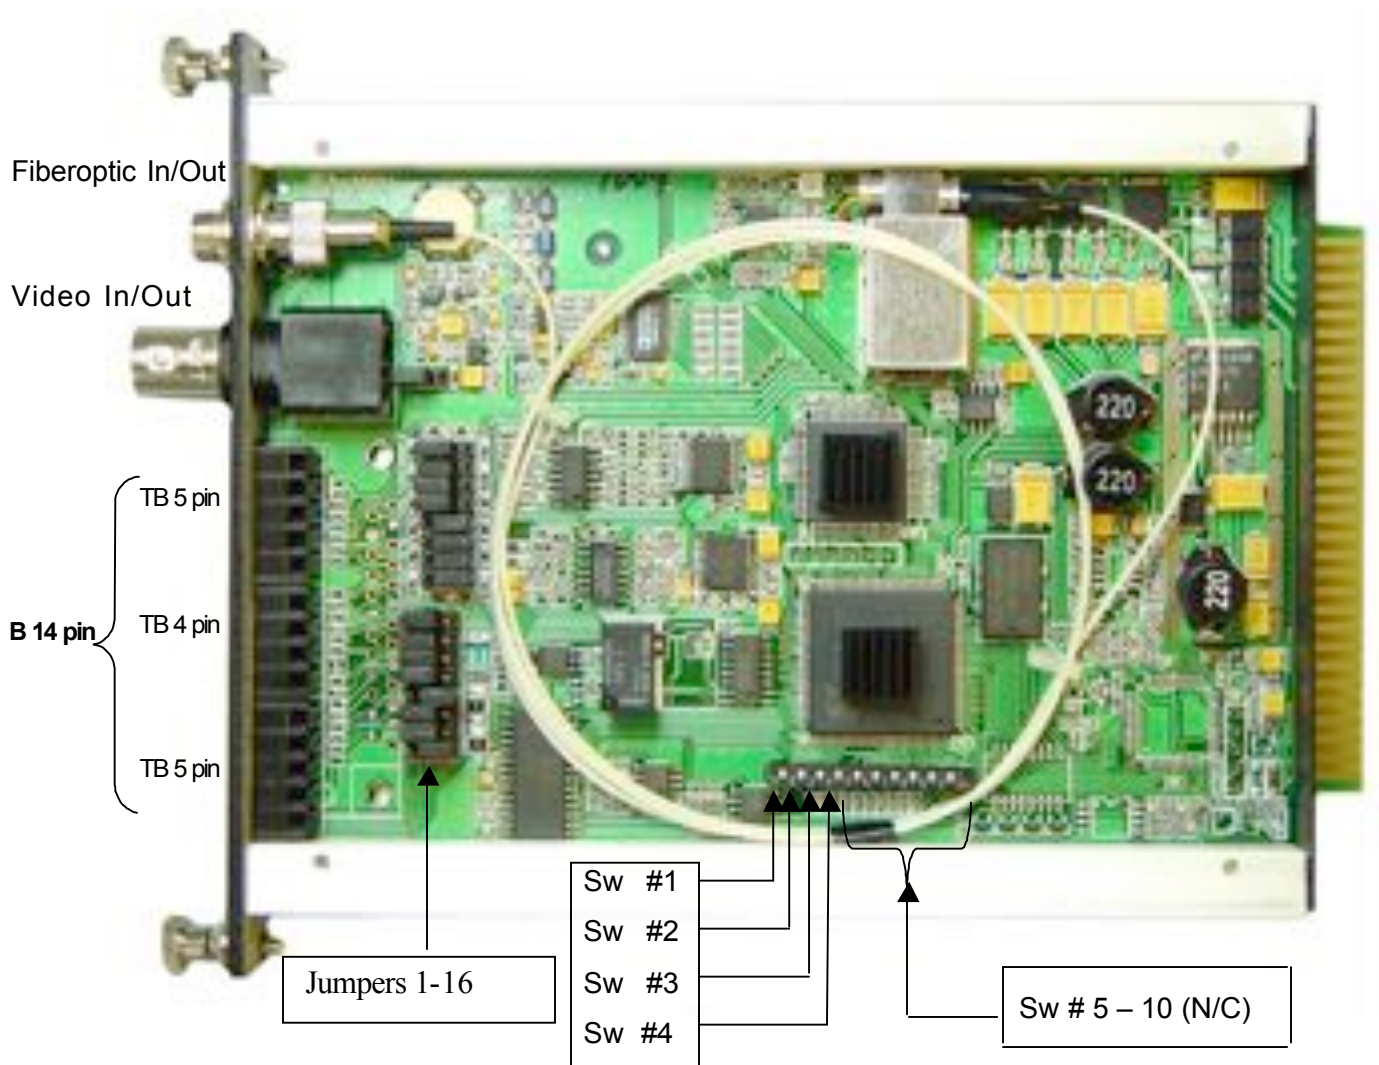

6.0 SpectraView™ Network Diagnostics

This module series is equipped with Meridian's SpectraView network diagnostics that continuously monitors the fiber system and associated equipment to provide real-time information regarding the integrity of the system.

SpectraView supports the following diagnostic functions:

1. Fiber continuity
2. Presence/loss of video

Notification and identification of faults for the above conditions is automatically displayed on the monitor connected to the video output on the receiver module.

The table below lists the detected faults and associated alert messages that are displayed on the monitor:

Fau	Video Display Message
Broken optical fiber between Tx & Rx units	8 vertical gray-scale bars across the monitor screen
Loss of video signal at CCTV (Tx) side	4 vertical gray-scale bars across the monitor screen

In addition to the loss of video on the monitor, these messages alert the operator as to the cause of the associated video loss. Upon receiving one of these messages, the operator should inform their technical service center to remedy the situation.

7.0 Optical Specifications

The table below lists the optical specifications for both singlemode and multimode fiber applications.

Optical Specifications						
Fiber Type/Size (um)	Optical Output (dBm)	Rx Sensitivity (dBm)	Optical Budget (dB)	Wavelength (nm)	Optical connector	Optical Dynamic Range (dB)
Multimode (FP Laser) 62.5/125	-5	-26	21	1300	ST	24
Singlemode (FP Laser) 9/125	-5	-26	21	1310	ST, FC	24

8.0 Troubleshooting

Below is a listing of several problems that may arise during the installation & operation of the modules. If you are having difficulty installing or operating the modules please refer to this list below.

Problem: *Module does not fit in chassis slots*

Action: Check module orientation. Meridian “Globe” must be oriented on the top left hand side of the module
Make sure the card guides in the chassis are aligned with the extrusion on the module

Problem: *Card power LED does not light when power to the module/subrack is applied or power indicator turns on and off*

Action: Check power supply to ensure that it is plugged in and turned on. If flashing continues, move module to another chassis or location in the same chassis, if available.

Problem: *No video at output of module*

Action: Check the SpectraView display on the monitor for an indication of what the problem may be. Also, check to ensure that the video channel-specific LEDs are on (Green). Also, check to ensure that the optical LEDs are ON. If no video is still present, check to ensure that the monitor is ON and the video cable is connected to the correct video port on the Rx module.

Problem: *Video image is dark*

Action: Check the iris control on the camera to ensure that it is open to the proper amount for the conditions

Problem: *Video image is too bright and appears overexposed*

Action: Check the Video overload indicator on the Rx module. If it is Red, the video signal level is too high and the CCTV iris should be checked to ensure that it is open properly for the conditions.

Problem: *No or distorted Audio*

Action: Check to ensure that the audio input/output connections are correct and that the Input/Output impedance jumpers are set correctly. The I/O impedance of each audio channel can be set independently so be sure to check that the appropriate channel is configured properly.

Problem: *No Data*

Action: Check that both the transmit and receive modules are set to transmit/receive the same data format (see section 5.0 for switch settings). Confirm that the data connections are correct (see section 4.0 for data pinout connections). Check to ensure that the data source is operating properly. .

If the problem still persists after reviewing the above items, please contact Meridian technical support (516- 285-1000).

Notes:



Meridian Technologies, Inc.
700 Elmont Road, Elmont NY 11003, USA
Telephone: +1-516-285-1000 Fax: +1-516-285-6300
E-mail: support@meridian-tech.com
Web: www.meridian-tech.com