



Installation/Operation Instructions

Fiber Optic Video/Data Transmission System

Part Number:

PX-600R-V5A5A/V5A5A-x (2-fiber)

***(Bi-directional Video (1-channel) &
bi-directional Audio (2-channels)
Fiber Optic Transceiver)***

Table of Contents

1.0	PRODUCT DESCRIPTION	3
2.0	INSTALLATION	3
3.0	PRODUCT SIGNAL FORMAT & SPECIFICATIONS	3
3.1	Front Panel Indicators	4
3.2	Audio Adjustments/Indicators	4
4.0	SIGNAL ASSIGNMENT (PINOUTS)	5
5.0	PRODUCT PART NUMBER VARIATIONS	7
6.0	OPTICAL SPECIFICATIONS	7
7.0	TROUBLESHOOTING.....	8

1.0 Product Description

Meridian's PX-600R-V5A5A/V5A5A product series are bi-directional fiber optic modems that transmit one channel of bi-directional video and two channels of bi-directional audio over two optical fibers using FM transmission technologies. This product series uses Meridian's standard 2-slot wide chassis mount card assembly and plugs into the following Meridian chassis: SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis.

See section 5.0 for specific product part numbers.

2.0 Installation

Series PX-600R-V5A5A/V5A5A products are two-slot wide cards and, as such, occupy two slots in Meridian's standard chassis (SR-1000/S, SR-1200/S, SR-1500/S, and SR-2001 & SR-2000 series 19" equipment chassis). To install in the chassis, orient the card with the Meridian logo at the top of the module and slide onto the top and bottom card guides in the chassis. Press securely on the top and bottom of the module to ensure that it is fully seated in the chassis so that the electrical connector mates with the chassis-mounted motherboard. Once installed, manually tighten the two thumbscrews located at the top and bottom of the card. Do not use tools to secure these and do not over tighten.

Note: Meridian recommends the use of forced-air cooling to avoid excessive heat generation inside a fully-populated chassis. A fan assembly tray (P/N FA-2000) with three (3) fans is available and should be installed under the 19" SR-2000/1 whenever possible.

3.0 Product Signal Format & Specifications

The PX-600R-V5A5A/V5A5A series products transmit and receive the following signals:

Signal Type	Channels
NTSC/PAL video	1
Audio (600 Ohm-balanced)	2

The tables below identify the specifications for the various signals that these modems transmit/receive.

Video	
Format	NTSC, PAL, SECAM
Voltage/Impedance	1Vp-p, 75Ω, 1.5Vp-p (max)
Differential Gain	<2
Differential Phase	<1.5 °
SNR	>60dB (weighted)
Return Loss	>30dB


Audio	
Input/Output Impedance	600 Ohm Balanced
Frequency Response	10Hz to 20KHz
THD	<1%, 1KHz @ maximum modulation
I/O Level	-6 to +6 dBm
SNR	>60dB

Connectors	
Video	75Ω BNC w/gold center pin
Audio	DB15 (high density DB9) – Both Audio channels combined on same connector
Optical	Singlemode – ST or FC Multimode - ST

3.1 Front Panel Indicators

Each module has two sets of four LED bar lights. The set of four indicators on the right side of the module is for the Video/Audio inputs while the LED bar display on the left is for the Video/Audio output signals.

The chart below indicates the LEDS and their function:

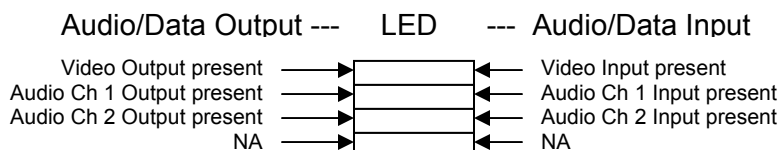

3.2 Audio Adjustments/Indicators

Each of the two bi-directional audio channels has input & output level adjustments associated with it on the respective module. The Audio input level adjustments are on the right side of the module while the corresponding output level adjustments are on the left side of the module. A small slotted jeweler's type screwdriver is used to adjust the potentiometer for each channel.

Each of the audio channels should be adjusted as follows:

1. Connect a 0dBm Audio signal to each channel
2. Tx adjustment - Adjust the corresponding Audio level potentiometer so that the corresponding LED just comes ON
3. Rx Adjustment – Connect two of the PX units together via the optical fibers. Once the Tx audio channel is properly adjusted, adjust the corresponding Audio channel potentiometer on the receive unit so that the LED associated with that channel just comes ON
4. Repeat for the 2nd Audio channel

These adjustments are necessary to eliminate any distortion of the Audio channels and possible errors in the data channel.

4.0 Signal Assignment (Pinouts)

There are two DE-15 female (high-density DB9) connectors on the module. The connector on the right side of the module is used for the audio input signals while the connector on the left side of the module is used for the corresponding audio output signals from the other module.

The table below shows the appropriate pinout for each of the connectors

Pinout Assignment		
Pin #	Audio/Data Input	Audio/Data Output
1	NC	NC
2	NC	NC
3	NC	NC
4	Ch 2 Audio (+)	Ch 2 Audio (+)
5	Ch 1 Audio (+)	Ch 1 Audio (+)
6	NC	NC
7	NC	NC
8	Gnd	Gnd
9	Shield Gnd	Shield Gnd
10	Shield Gnd	Shield Gnd
11	NC	NC
12	NC	NC
13	Gnd	Gnd
14	Ch 2 Audio (-)	Ch 2 Audio (-)
15	Ch 1 Audio (-)	Ch 1 Audio (-)

Figures 4.1 below shows the location of the various connectors & indicators on the PX-600 series products.

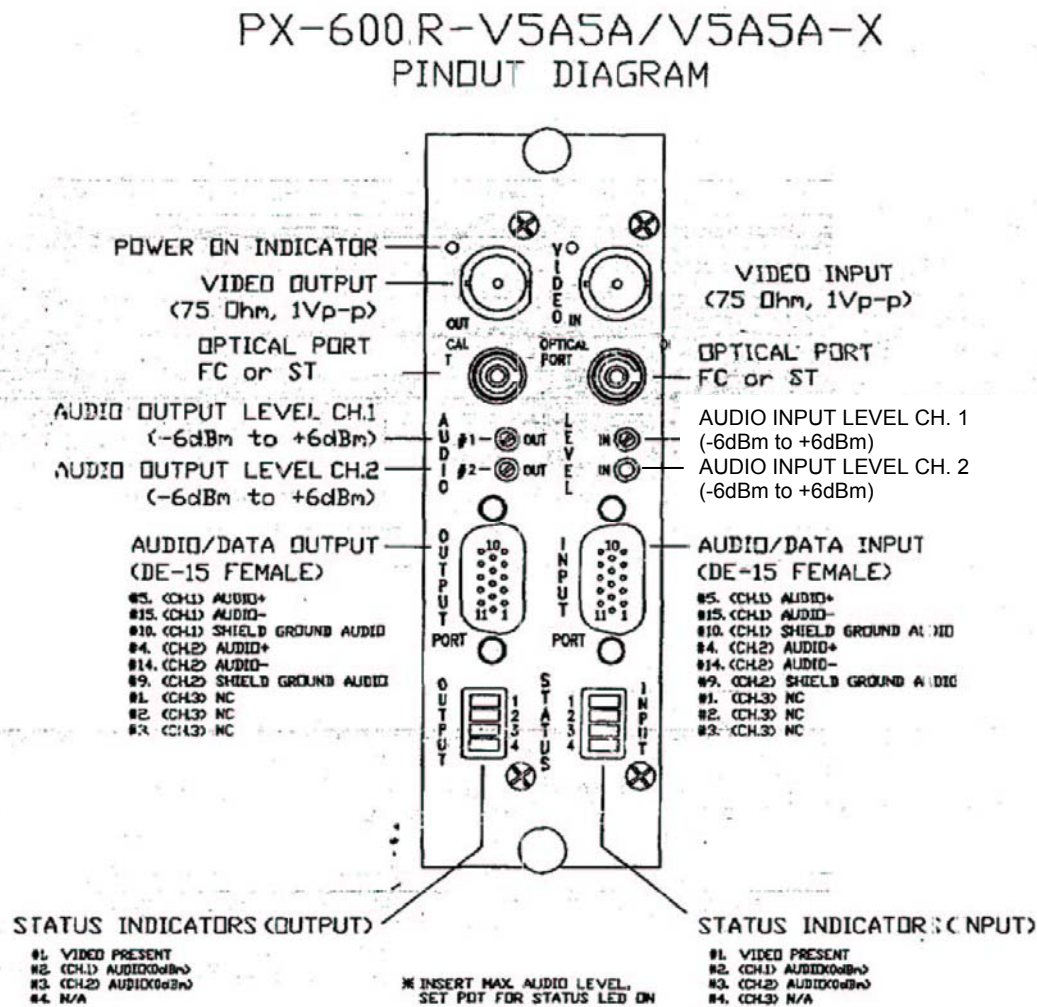


Figure 4.1
Front Panel Layout/Pinout Diagrams
(2-Fiber module)

5.0 Product Part Number Variations

The table below lists the various part numbers associated with different module types:

Basic module description:

Video: 1-channel, Bi-directional

Audio: 2-channels, bi-directional

Side “A”	Side “B”	# Fibers & Type	Wavelength
PX-600R-V5A5A/5A5A-0	PX-600R-V5A5A/5A5A-0	2 (MM)	850 nm
PX-600R-V5A5A/5A5A-1	PX-600R-V5A5A/5A5A-1	2 (MM)	1300 nm
PX-600R-V5A5A/5A5A-2	PX-600R-V5A5A/5A5A-2	2 (SM)	1310 nm

Since these signals on these modules are completely bi-directional, there is no preferred Tx or Rx side. The part numbers for two fiber modules are the same.

6.0 Optical Specifications

Optical Specifications						
Fiber Type/Size (um)	Optical Output (dBm)	Rx Sensitivity (dBm)	Optical Budget (dB)	Wavelength (nm)	Optical connector	Optical Dynamic Range (dB)
Multimode (FP Laser) 62.5/125	-13	-34	21	1300/850	ST	24
Singlemode (FP Laser) 9/125	-10	-34	24	1310/1550	ST, FC	24

7.0 Troubleshooting

Below is a listing of several problems that may arise during the installation & operation of the modules. If you are having difficulty installing or operating the modules please refer to this list below.

- Problem:** *Module does not fit in chassis slots*
Action: Check module orientation. Meridian “Globe” must be oriented on the top left hand side of the module
Make sure the card guides in the chassis are aligned with the extrusion on the module
- Problem:** *Card power LED does not light when power to the module/subrack is applied or power indicator turns on and off*
Action: Check power supply to ensure that it is plugged in and turned on. If flashing continues, move module to another chassis or location in the same chassis, if available.
- Problem:** *No video/audio/data communications.*
Action: 1 – Ensure that power is applied to each of the modules
2 – For the 2-fiber modules, make sure that the Tx fiber port on one module is connected to the Rx fiber port on the other.
- Problem:** *No video at output of module*
Action: Check to ensure that the video channel-specific LEDs are on (Green). Also, check to ensure that the optical LEDs are ON. If no video is still present, check to ensure that the monitor is ON and the video cable is connected to the correct video port on the Rx module.
- Problem:** *Video image is dark*
Action: Check the iris control on the camera to ensure that it is open to the proper amount for the conditions
- Problem:** *Video image is too bright and appears overexposed*
Action: Check the Video overload indicator on the Rx module. If it is Red, the video signal level is too high and the CCTV iris should be checked to ensure that it is open properly for the conditions.
- Problem:** *No Audio*
Action: Make sure that the audio input/output sources with proper audio level (0dBm) is connected to the respective audio channel connector pinouts (Ch1 & Ch2). The respective audio LED for each channel should be ON
- Problem:** *Distorted Audio*
Action: Check the audio source & impedance to ensure that it is within appropriate limits (0dBm & 600 ohm, balanced). Check the audio output impedance to ensure that it is 600 ohm, balanced and that the output level is 0dBm. If not, adjust the input/output potentiometers so that the audio LED lights have just turned ON.

If the problem still persists after reviewing the above items, please contact Meridian technical support (516-285-1000).